


hyco®

Catalog 2

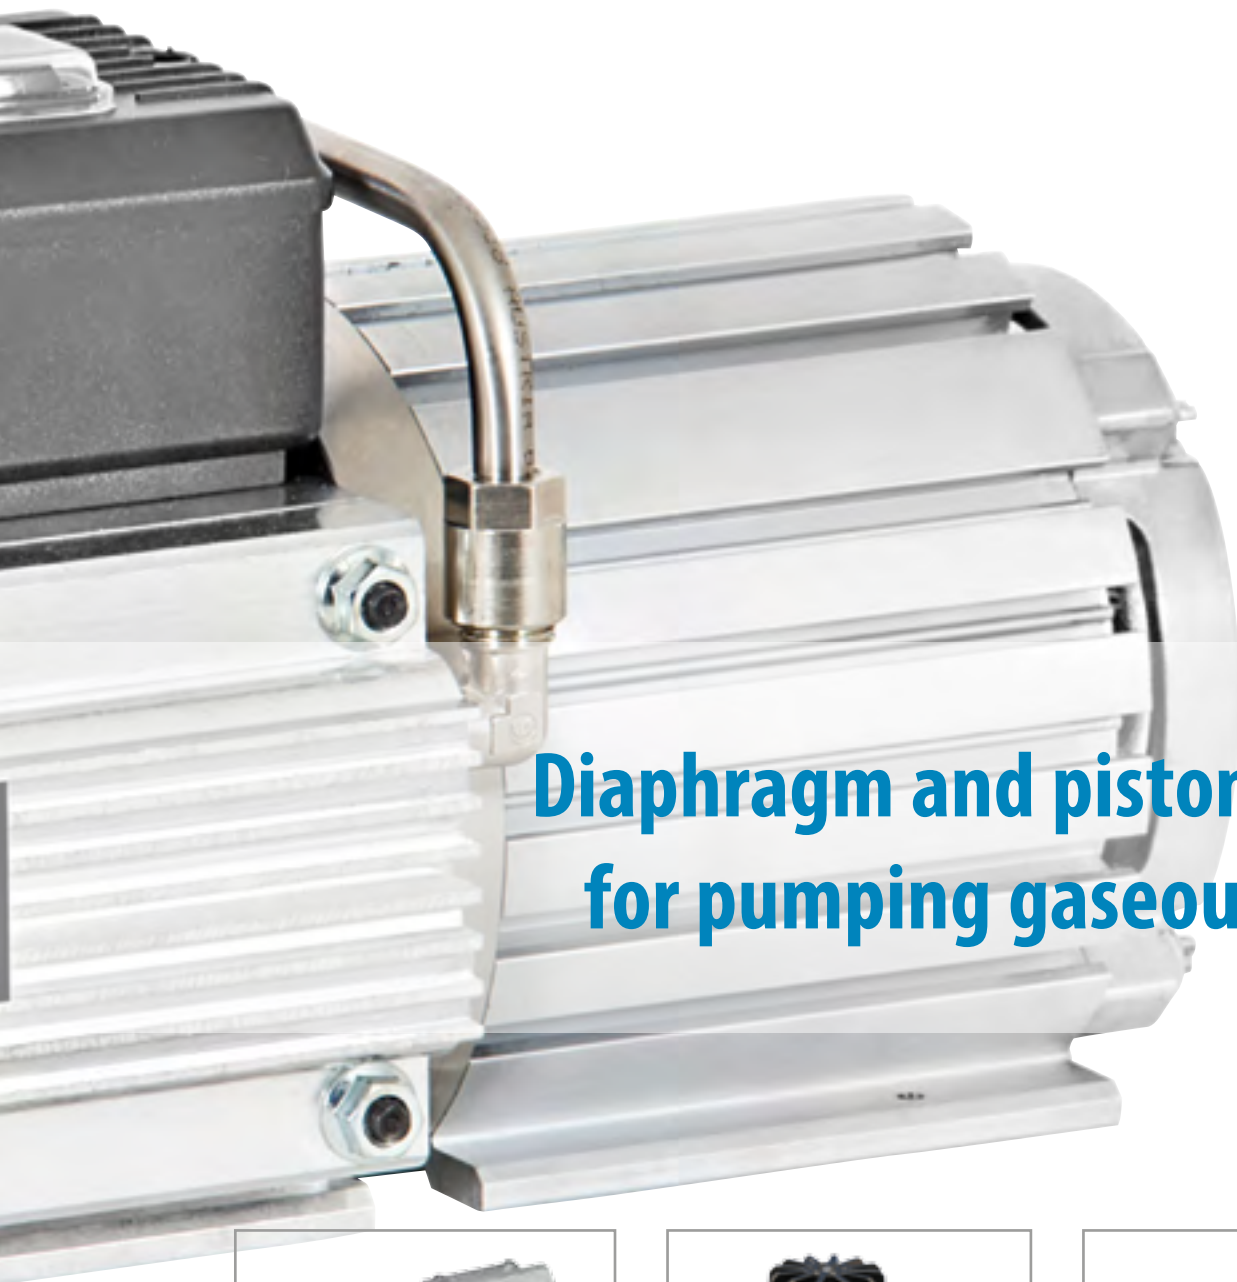

**Diaphragm and piston pumps
for pumping gaseous media**





General conditions of delivery: hyco.de

Overview used pictures: hyco.de

hyco® and hyco® GREENtec are registered trade marks.

hycoKAT-1000|17|V01-IngbüroBKL-MarKomAuf-preludio.de







Diaphragm and piston pumps for pumping gaseous media


Catalog 2

hyco Vakuumtechnik GmbH
Konrad-Zuse-Bogen 1
82152 Krailling
Germany
T +49 (0)89 / 85 66 19 00
F +49 (0)89 / 85 66 19 01
E info@hyco.de
W hyco.de

Table of content	4
Corporate informations	6
Primary goals - Quality and environment - ISO 9001 Certification	7
General information to diaphragm and piston pumps	8
Environmentally friendly vacuum technology	9
Pump selection table	10
Pumps for line of business and applications	
• Bottling plant	12
• Flue gas measuring	12
• Breathing	13
• Fuel cell	13
• Chemical industry	14
• Chemically resistant pumps	14
• Dental technology	15
• Distillation	15
• Leakage tests	16
• Degassing	16
• Filtration	17
• Research and development	17
• Electrophoresis	18
• Freeze drying	18
• Gas analysis	19
• Semiconductor industry	19
• Air-conditioning technology	20
• Food preservation	20
• Evacuation and compression	21
• Laser technology	21
• Food industry	22
• Machine building industry	22
• Medical technology	23
• Sterilisation of medical technology	23
• Measurement of flue gas	24
• Customer pumps for application solutions	24
• Cleaning of metal constructions	25
• Textile cleaning machines	25
• Reprographic technique	26
• Service hydraulic systems	26
• Safety engineering	27
• Environmental analysis	27
• Vacuum coating	28
• Vacuum furnace	28
• Vacuum package	29
• Booster pumps turbomolecular	29

Pump details

1-cylinder diaphragm-		and piston pumps	T	_____	30
2-cylinder diaphragm-		and piston pumps	T	_____	54
4-cylinder diaphragm pumps				_____	72
8-cylinder diaphragm pumps				_____	84
Technology hyco® pumps					89
Connection options hyco® pumps					92
Corrosion resistant hyco® diaphragm and piston pumps					93
Conversion tables					94
Basic data sheet					95

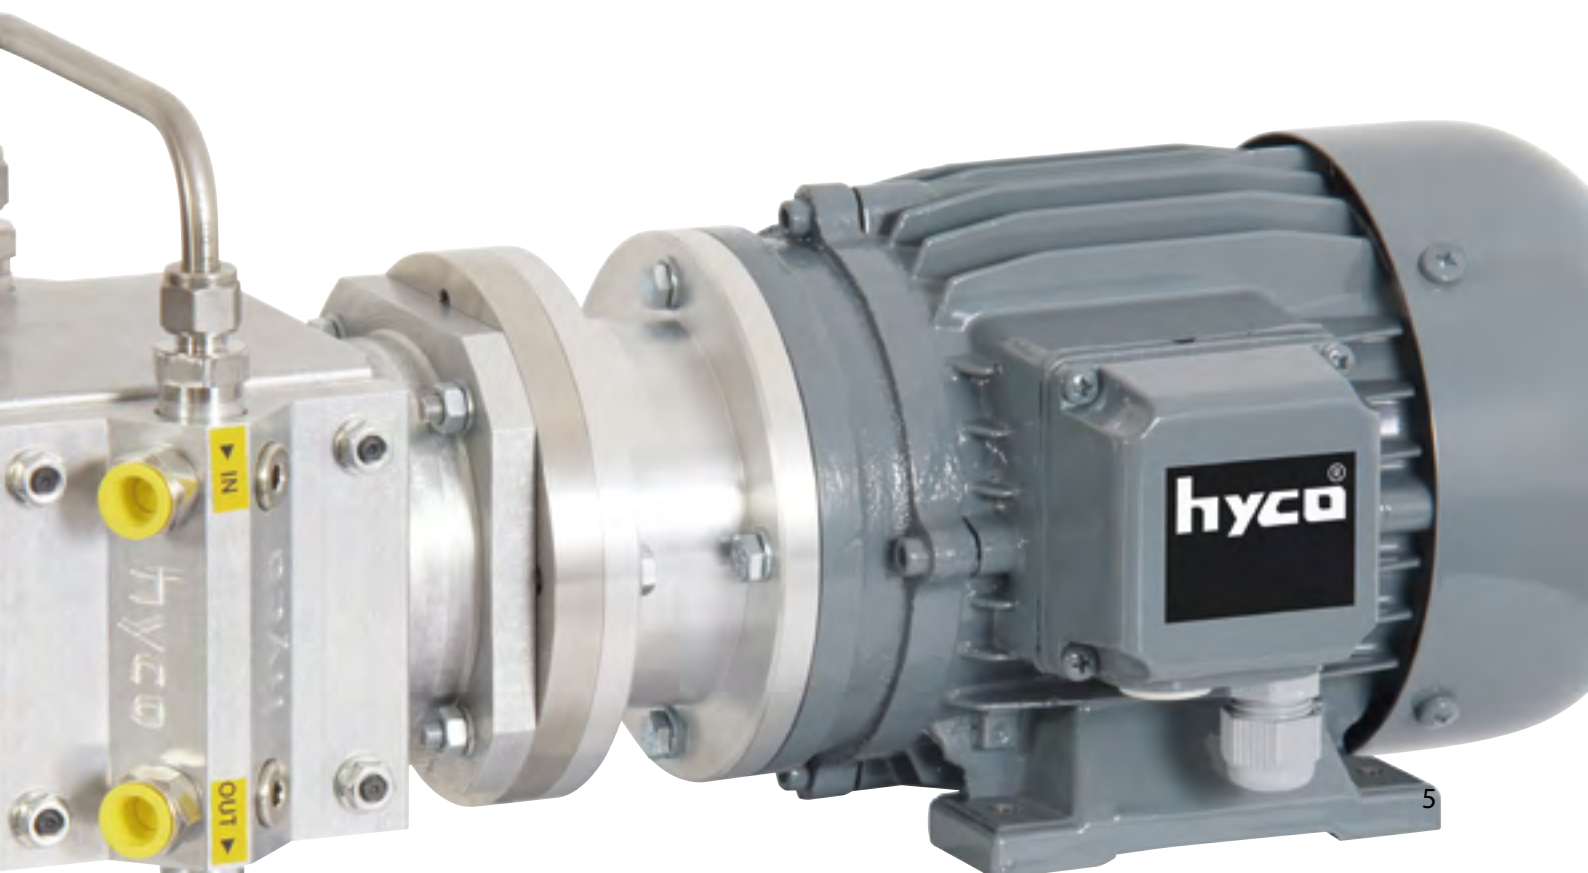

With 50 years of experience in the design and manufacturing of diaphragm pumps and piston pumps for evacuating and pumping gases and vapours, we - hyco Vakuumtechnik GmbH - offer a wide range products for a great variety of markets throughout the world.

Our product portfolio encompasses diaphragm pumps and piston pumps with linear or piston drive, measuring gas pumps, laboratory pumps and individual special pumps designed to customer specifications. In total, our pump portfolio comprises over 40 product lines with sub-series and models for every application.

In our main plant to the south of Munich, we have the best possible spatial conditions to design, develop and manufacture our pumps to match customer specifications. The development and manufacturing is carried out here with our own employees - Made in Germany. In doing so, the highest levels of quality, innovation and compliance with ecological criteria are our guiding principles.

hyco® product lines effortlessly achieve the technical and commercial requirements for vacuum generation. As an innovative and well-established company with many years of experience, our close proximity to our customers and our continuously growing know-how, allow us to quickly fulfil our customers' wishes. In doing so, the use of the latest technologies and well-thought-out workflows along with optimised and efficient working processes guarantee a continuously high level of quality for our products.

hyco Vakuumtechnik is your Premium Partner for pump technology - since 1968!



Primary goals

For almost 50 years, hyco Vakuumtechnik has maintained a consistent focus on solution-oriented requirements in the OEM sector for transporting gaseous media whilst complying with the highest quality demands.

This enables special customer wishes or special and custom versions to be manufactured alongside mature serial products in small production runs and in the highest quality.

Intensive and customer-oriented consulting are a top priority for us in order to achieve this objective.

The markedly better-than-average service life of our products in combination with their economic efficiency at an attractive product price, remains a long-term guarantee within a reliable process control system.

Attaining this high quality whilst simultaneously observing the environmental principles are central factors in the hyco company philosophy.

Quality and environment

The objective of our quality policy is to be able to offer products that represent the highest quality standards and that comply with the legal requirements.

Attaining and increasing the quality whilst simultaneously observing the environmental principles are central factors in the hyco company philosophy. For this reason, processes are optimised in order to be able to make economical use of valuable resources such as energy and water.

Countless water jet pumps have been replaced with hyco® diaphragm pumps in the last 50 years, resulting in tons of contaminated waste water being avoided.

We offer a healthy working environment for our employees near the edge of the forest and near to the Fünf-Seen-Land lake region to the south of Munich.

ISO 9001 Certification

Competence and quality down to the smallest details!

hyco Vakuumtechnik is certified per ISO 9001 and undergoes an annual audit process. That is our minimum standard whilst striving to target and obtain the highest standard of customer satisfaction through continuous improvements, further developments and error prevention.

Attaining this high quality whilst simultaneously observing the environmental principles are central factors in the hyco company philosophy.

General information to diaphragm and piston pumps

Customer Pumps

Since the founding of hyco Vakuumtechnik almost a half century ago, we have specialised in the design and manufacturing of pumps to meet customer wishes. Through our expert knowledge and many years of experience we can offer you the best possible solution and excellent support for your requirements with hyco® equipment designed exclusively for you.

Customer pumps for application solutions

hyco Vakuumtechnik is a specialist and expert in the modification of series pumps for customer-specific solutions. Experience and knowledge accumulated over the years are resolutely applied to find the best possible solution for the customer.

hyco® diaphragm pumps and piston pumps can be used for all applications where an oil-free, pure and clean transportation, circulation, evacuation and sealing of both neutral and aggressive gases and vapours is required.

We would be delighted to advise you with regard to your particular requirements and conditions.

hyco® pumps for testing

hyco® diaphragm pumps and piston pumps are used in a great variety of industries for the most varied of applications.

In order to support you in the selection of pumps for your particular requirements, we offer sample pumps for standard models. Sample pumps can be requested for all hyco® standard models.

Checking, maintenance and repair

Our hyco® pumps are designed for use in process technology and for a long service life thanks to their construction and design. If you should nonetheless wish to send your pump in for checking and repair, please use the decontamination form.

Within the scope of a maintenance agreement, all worn parts will be replaced and the pump will then undergo a functional check.

If you require a service kit - this includes diaphragms, valves and O-rings for the complete servicing of a pump.

If you require additional services, please just ask.

Since the founding of hyco Vakuumtechnik 50 years ago, our philosophy has been characterised by environmental protection and environmentally-friendly vacuum technology.

We produced oil-free diaphragm und piston pumps right from the very start. We have been committed to oil-free vacuums and green technology and as the years have passed this has become ever more important in the context of climate protection.

Oil-free hyco® diaphragm pumps have replaced the classical water jet pumps in the most varied of applications and industries. Through our continuous work we have contributed to saving operational resources such oil and water and improving the CO2 balance for long-term climate protection.



In order to show our environmental awareness, our diaphragm and piston pumps are furnished with the new hyco® GREENtec label.

hyco® GREENtec stands for environmentally friendly, oil-free and water-free vacuum technology with long operational service life and long maintenance intervals.

hyco® GREENtec - 100% environmentally friendly vacuum technology since 1968!

Pump selection table

Overview diaphragm pumps and piston pumps					
pumping speed [l/min]	final pressure abs. Vac	pressure [bar]		pump	
3	120	8		PB-22	
3,5	400	1		PB-32	
3,5	120	4		PB-2	
3,8	200	2,5		PB-1	
4	128	6		PB-2	
4	270	2		PB-19	
4,3	27	6		PB-22	
4,5	120	4		PB-22	
5	320	4		PB-22	
5,3	110	3		PB-1	
5,8	80	6		PB-2	
6	120	3		PB-1	
6	170	2		PB-19	
6,8	12	3		PB-4	
6,5	120	4		PB-2	
6,5	220	2,5		PB-1	
6,5	220	2,5		PB-32	
8	128	4		PB-2	
8	27	4		PB-22	
8,4	150	4		PB-3	
8,4	150	4		PB-18	
8,4	150	4		PB-31	
8,5	45	3		PB-28	
8,5	35	3		PB-42	
8,5	32	4		PB-6	
8,5	32	4		PB-21	
8,5	32	4		PB-23	
8,5	140	5		PB-22	
8,5	190	3		PB-1	
8,5	190	3		PB-32	
9	318	4		PB-22	
11	3	2		PB-5	
11	80	4		PB-2	
11,2	104	3		PB-1	
11,2	104	3		PB-32	
11,5	12	3		PB-4	
12,3	100	3		PB-4	
13	12	2		PB-5	
14,5	45	8		PB-38	
15,2	120	3		PB-3	
15,5	155	5		PB-35	
16	20	2		PB-28	
17	120	4		PB-21	
17	120	4		PB-29	
17	120	4		PB-30	
17	120	4		PB-6	
17	120	4		PB-23	
17	150	3		PB-42	
17,2	35	8		PB-38	
18	130	4		PB-22	
18,5	140	6		PB-35	
21,5	12	3		PB-6	
21,5	12	3		PB-21	
21,5	15	2		PB-42	
21,5	25	2		PB-28	
21,5	35	6		PB-39	
22,5	11	2		PB-23	
23	120	8		PB-35	
23	130	6		PB-36	
23,5	20	6		PB-38	
23,5	3	2		PB-5	
23,5	95	3		PB-3	
23,5	95	3		PB-18	
23,5	95	3		PB-31	
24,5	1	1		PB-40	
25	95	2		PB-5	
25,2	30	5		PB-39	
25,5	20	1		PB-28	
25,5	125	2		PB-3	
26	85	3		PB-4	

11

Our pumps are used in many process systems, including a great variety of filling systems.

hyco® diaphragm pumps and piston pumps can be used for all applications where an oil-free, pure and clean transportation, circulation, evacuation and sealing of both neutral and aggressive gases and vapours is required.

Our complete pump overview you can see from page 30 or on the internet hyco.de/en/pumps



Botting plant Flue gas measuring

hyco® diaphragm pumps and piston pumps can be used for all applications where an oil-free, pure and clean transportation, circulation, evacuation and sealing of both neutral and aggressive gases and vapours is required.

Our complete pump overview you can see from page 30 or on the internet hyco.de/en/pumps

CO₂



hyco® diaphragm pumps and piston pumps can be used for all applications where an oil-free, pure and clean transportation, circulation, evacuation and sealing of both neutral and aggressive gases and vapours is required.

We would be delighted to assist you with your special requirements and conditions.

Our complete pump overview you can see from page 30 or on the internet hyco.de/en/pumps




Breathing

Fuel cell

hyco® diaphragm pumps and piston pumps can be used for all applications where an oil-free, pure and clean transportation, circulation, evacuation and sealing of both neutral and aggressive gases and vapours is required.

Our complete pump overview you can see from page 30 or on the internet hyco.de/en/pumps

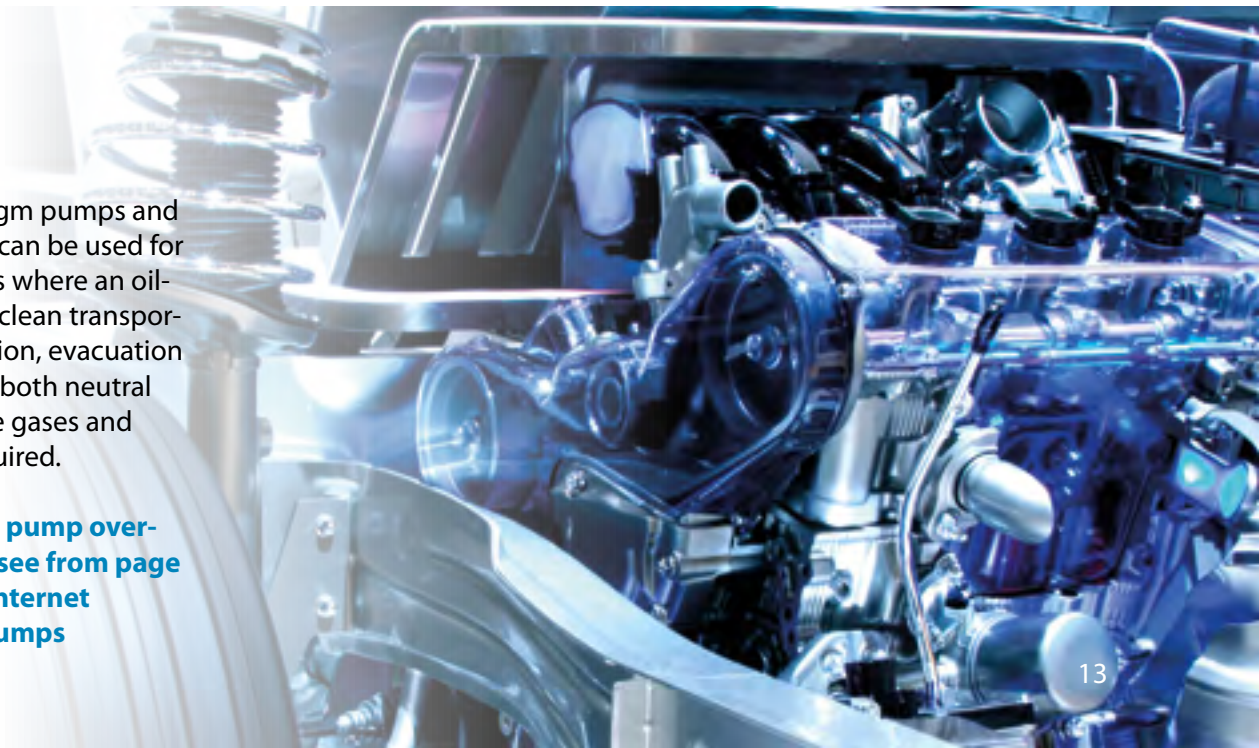

hyco® diaphragm pumps and piston pumps can be used for all applications where an oil-free, pure and clean transportation, circulation, evacuation and sealing of both neutral and aggressive gases and vapours is required.

Our complete pump overview you can see from page 30 or on the internet hyco.de/en/pumps



Chemical industry

Chemically resistant pumps

hyco® diaphragm pumps and piston pumps can be used for applications where an oil-free, pure and clean transportation, circulation, evacuation and sealing of both neutral and aggressive gases and vapours is required.

Our customer service helps you to find out the pump for your applications.

Our complete pump overview you can see from page 30 or on the internet hyco.de/en/pumps



hyco® diaphragm pumps and piston pumps can be used for all applications where an oil-free, pure and clean transportation, circulation, evacuation and sealing of both neutral and aggressive gases and vapours is required.

For your special applications we recommend the **product series PB-4 and PB-23**. The pumps you can find at pages 54 and page 62.

Our complete pump overview you can see from page 30 or on the internet hyco.de/en/pumps

Dental technology

Distillation

hyco® diaphragm pumps and piston pumps can be used for all applications where an oil-free, pure and clean transportation, circulation, evacuation and sealing of both neutral and aggressive gases and vapours is required.

We would be delighted to assist you with your special requirements and conditions.

Our complete pump overview you can see from page 30 or on the internet hyco.de/en/pumps



Pumps for line of business and applications



hyco® diaphragm pumps and piston pumps can be used for all applications where an oil-free, pure and clean transportation, circulation, evacuation and sealing of both neutral and aggressive gases and vapours is required.

We would be delighted to assist you with your special requirements and conditions.

Our complete pump overview you can see from page 30 or on the internet hyco.de/en/pumps

Leakage tests

Degassing




hyco® diaphragm pumps and piston pumps can be used for all applications where an oil-free, pure and clean transportation, circulation, evacuation and sealing of both neutral and aggressive gases and vapours is required.

Please ask our customer service for your special applications.

Our complete pump overview you can see from page 30 or on the internet hyco.de/en/pumps

hyco® diaphragm pumps and piston pumps can be used for all applications where an oil-free, pure and clean transportation, circulation, evacuation and sealing of both neutral and aggressive gases and vapours is required.

Our complete pump overview you can see from page 30 or on the internet hyco.de/en/pumps

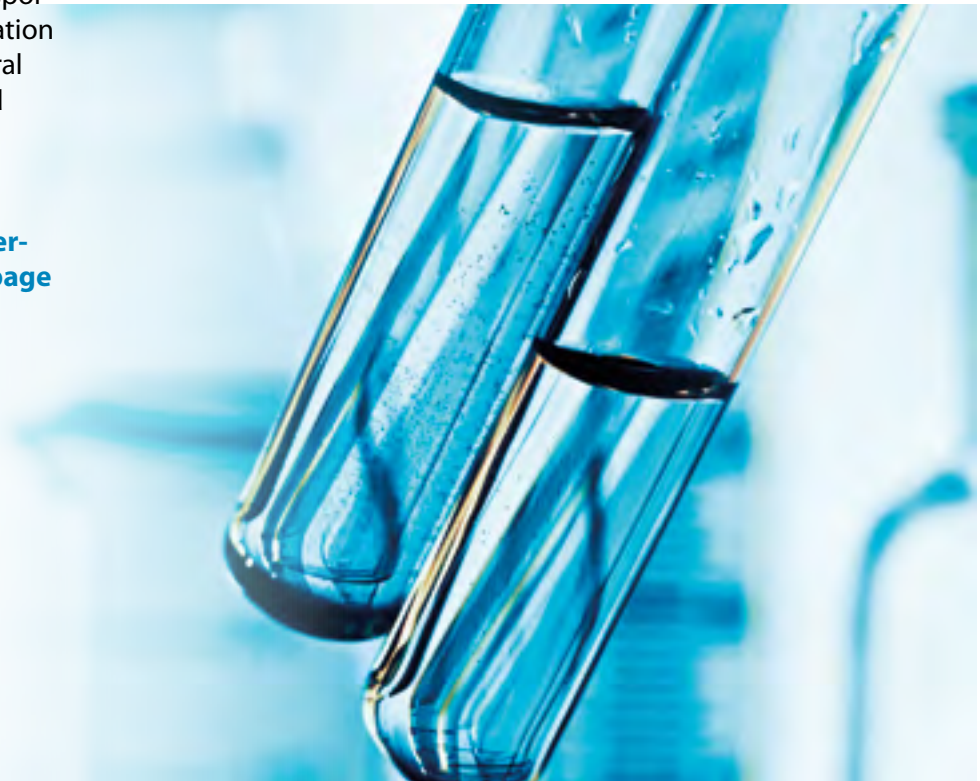

Filtration Research & development

hyco® diaphragm pumps and piston pumps can be used for all applications where an oil-free, pure and clean transportation, circulation, evacuation and sealing of both neutral and aggressive gases and vapours is required.

Our complete pump overview you can see from page 30 or on the internet hyco.de/en/pumps



hyco® diaphragm pumps and piston pumps can be used for all applications where an oil-free, pure and clean transportation, circulation, evacuation and sealing of both neutral and aggressive gases and vapours is required.

Our complete pump overview you can see from page 30 or on the internet hyco.de/en/pumps



Electrophoresis

Freeze drying

hyco® diaphragm pumps and piston pumps can be used for all applications where an oil-free, pure and clean transportation, circulation, evacuation and sealing of both neutral and aggressive gases and vapours is required.

Our complete pump overview you can see from page 30 or on the internet hyco.de/en/pumps



hyco® diaphragm pumps and piston pumps can be used for all applications where an oil-free, pure and clean transportation, circulation, evacuation and sealing of both neutral and aggressive gases and vapours is required.

We would be delighted to assist you with your special requirements and conditions.

Our complete pump overview you can see from page 30 or on the internet hyco.de/en/pumps




Gas analysis

Semiconductor industry

hyco® diaphragm pumps and piston pumps can be used for all applications where an oil-free, pure and clean transportation, circulation, evacuation and sealing of both neutral and aggressive gases and vapours is required.

Please test our pumps for your application.

Our complete pump overview you can see from page 30 or on the internet hyco.de/en/pumps

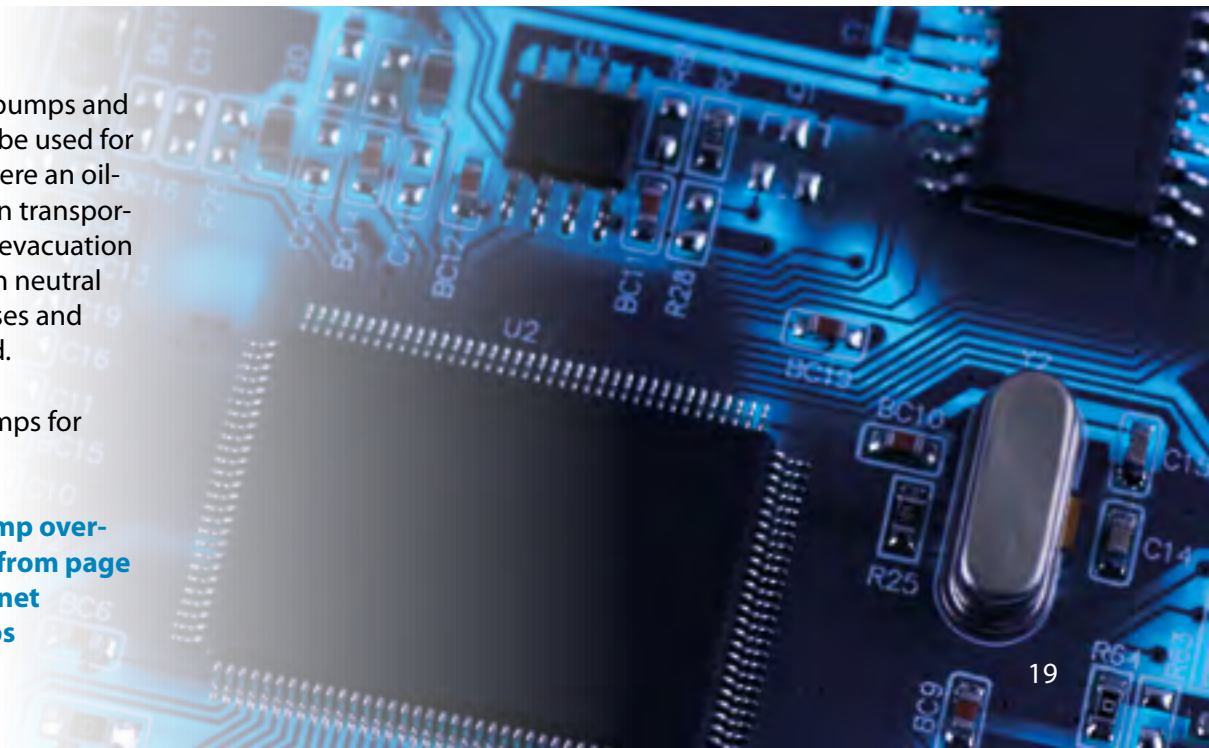



hyco® diaphragm pumps and piston pumps can be used for all applications where an oil-free, pure and clean transportation, circulation, evacuation and sealing of both neutral and aggressive gases and vapours is required.

We would be delighted to assist you with your special requirements and conditions.

Our complete pump overview you can see from page 30 or on the internet hyco.de/en/pumps

Air-conditioning technology

Food preservation



hyco® diaphragm pumps and piston pumps can be used for all applications where an oil-free, pure and clean transportation, circulation, evacuation and sealing of both neutral and aggressive gases and vapours is required. Ask for your special pump or test our pumps.

Our complete pump overview you can see from page 30 or on the internet hyco.de/en/pumps

hyco® diaphragm pumps and piston pumps can be used for all applications where an oil-free, pure and clean transportation, circulation, evacuation and sealing of both neutral and aggressive gases and vapours is required.

Our complete pump overview you can see from page 30 or on the internet hyco.de/en/pumps



Evacuation & compression

Laser technology

hyco® diaphragm pumps and piston pumps can be used for all applications where an oil-free, pure and clean transportation, circulation, evacuation and sealing of both neutral and aggressive gases and vapours is required.

For your special applications we recommend the **product serie PB-7**. The pumps you can find at page 74.

Our complete pump overview you can see from page 30 or on the internet hyco.de/en/pumps



hyco® diaphragm pumps and piston pumps can be used for all applications where an oil-free, pure and clean transportation, circulation, evacuation and sealing of both neutral and aggressive gases and vapours is required.

Our complete pump overview you can see from page 30 or on the internet hyco.de/en/pumps



Food industry

Machine building industry



hyco® diaphragm pumps and piston pumps can be used for all applications where an oil-free, pure and clean transportation, circulation, evacuation and sealing of both neutral and aggressive gases and vapours is required.

We would be delighted to assist you with your special requirements and conditions.

Our complete pump overview you can see from page 30 or on the internet hyco.de/en/pumps

We would be delighted to assist you with your special requirements and conditions for pumps in the medical industry.

For your special applications we recommend the **product series PB-8 and PB-10**. The pumps you can find at pages 76 and page 86.

For our testing we have a lot of several pumps. Please ask the customer service for it.

Our complete pump overview you can see from page 30 or on the internet hyco.de/en/pumps



Medical technology

Sterilisation medical techn.

For your special sterilisation applications we recommend the **product serie PB-23**. The pumps you can find at page 62.

Our complete pump overview you can see from page 30 or on the internet hyco.de/en/pumps





hyco® diaphragm pumps and piston pumps can be used for all applications where an oil-free, pure and clean transportation, circulation, evacuation and sealing of both neutral and aggressive gases and vapours is required.

We would be delighted to assist you with your special requirements and conditions.

Our complete pump overview you can see from page 30 or on the internet hyco.de/en/pumps

Measurement of flue gas Customer solution pumps



hyco® diaphragm pumps and piston pumps can be used for all applications where an oil-free, pure and clean transportation, circulation, evacuation and sealing of both neutral and aggressive gases and vapours is required.

Please ask our customer service for your testing pump.

Our complete pump overview you can see from page 30 or on the internet hyco.de/en/pumps

hyco® diaphragm pumps and piston pumps can be used for all applications where an oil-free, pure and clean transportation, circulation, evacuation and sealing of both neutral and aggressive gases and vapours is required.

For your special applications we recommend the **product serie PB-7**. The pumps you can find at page 74.

Our complete pump overview you can see from page 30 or on the internet hyco.de/en/pumps




Cleaning of metal constructions

Textile cleaning machines

hyco® diaphragm pumps and piston pumps can be used for all applications where an oil-free, pure and clean transportation, circulation, evacuation and sealing of both neutral and aggressive gases and vapours is required.

For your special cleaning applications we recommend the **product serie PB-7**. The pumps you can find at page 74.

Our complete pump overview you can see from page 30 or on the internet hyco.de/en/pumps

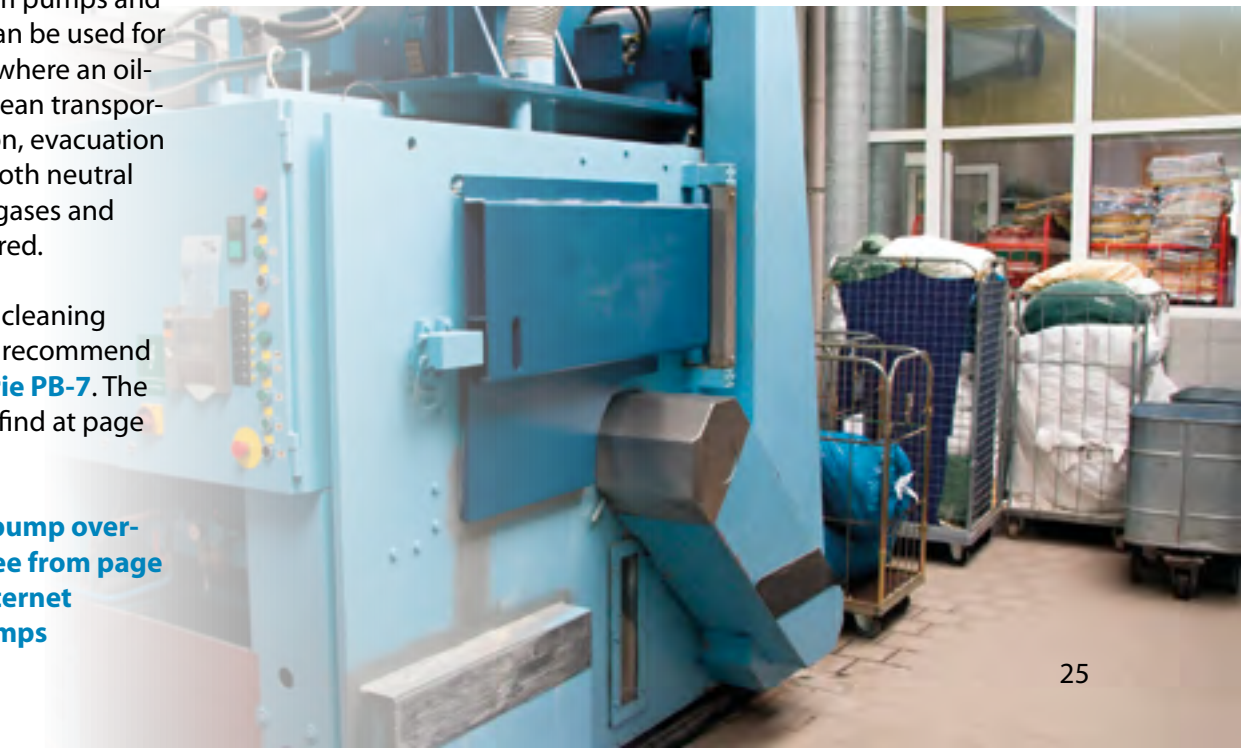

hyco® diaphragm pumps and piston pumps can be used for all applications where an oil-free, pure and clean transportation, circulation, evacuation and sealing of both neutral and aggressive gases and vapours is required.

Our complete pump overview you can see from page 30 or on the internet hyco.de/en/pumps



Reprographic technique Service hydraulic systems



We would be delighted to assist you with your special requirements and conditions.

For your special applications we recommend the **product serie PB-17**. The pumps you can find at page 36.

Our complete pump overview you can see from page 30 or on the internet hyco.de/en/pumps

hyco® diaphragm pumps and piston pumps can be used for all applications where an oil-free, pure and clean transportation, circulation, evacuation and sealing of both neutral and aggressive gases and vapours is required.

We would be delighted to assist you with your special requirements and conditions. To do so, please fill out the form.

Our complete pump overview you can see from page 30 or on the internet hyco.de/en/pumps



Safety engineering Environmental analysis

hyco® diaphragm pumps and piston pumps can be used for all applications where an oil-free, pure and clean transportation, circulation, evacuation and sealing of both neutral and aggressive gases and vapours is required.

Please test our hyco® pumps and ask for your special application pump.

Our complete pump overview you can see from page 30 or on the internet hyco.de/en/pumps




hyco® diaphragm pumps and piston pumps can be used for all applications where an oil-free, pure and clean transportation, circulation, evacuation and sealing of both neutral and aggressive gases and vapours is required.

Our complete pump overview you can see from page 30 or on the internet hyco.de/en/pumps



Vacuum coating Vacuum furnace

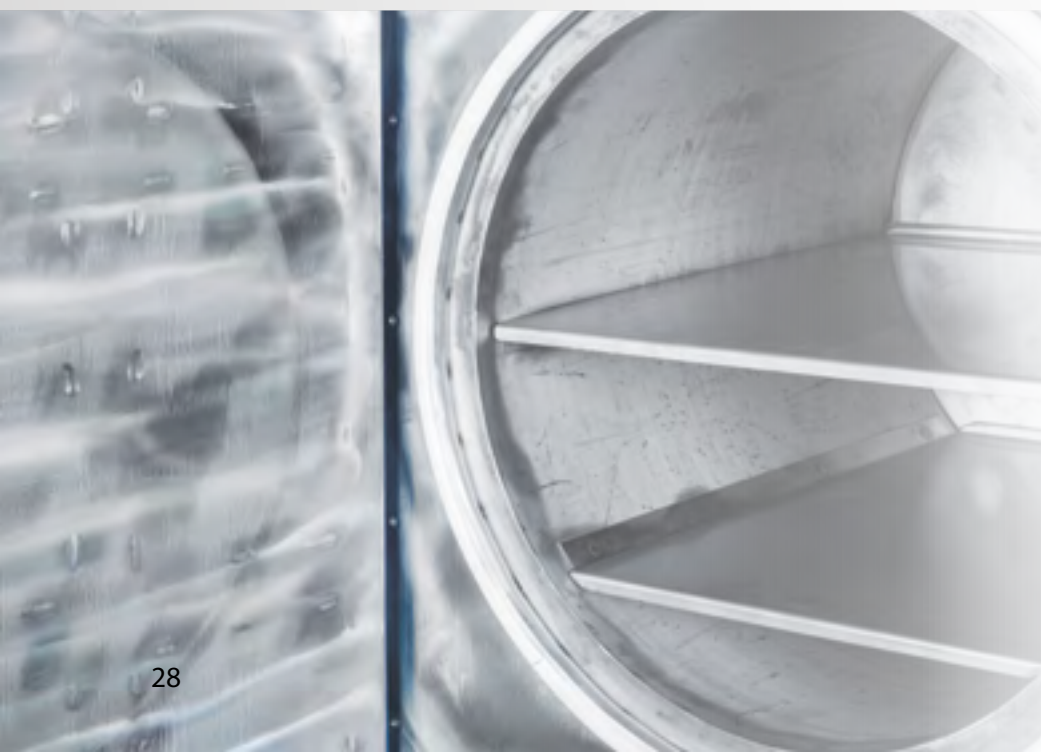

hyco® diaphragm pumps and piston pumps can be used for all applications where an oil-free, pure and clean transportation, circulation, evacuation and sealing of both neutral and aggressive gases and vapours is required.

We would be delighted to assist you with your special requirements and conditions.

Our complete pump overview you can see from page 30 or on the internet hyco.de/en/pumps

hyco® diaphragm pumps and piston pumps can be used for all applications where an oil-free, pure and clean transportation, circulation, evacuation and sealing of both neutral and aggressive gases and vapours is required.

For your special vacuum applications we recommend the **product serie PB-9**. The pumps you can find at page 84.

Our complete pump overview you can see from page 30 or on the internet hyco.de/en/pumps



Vacuum package Booster pumps Turbomolecular

For your special applications we recommend the **product series PB-6, PB-7 and PB-40**. The pumps you can find at pages 56, 74 and 80.

Our complete pump overview you can see from page 30 or on the internet hyco.de/en/pumps



diaphragm

1-cylinder

The oil-free and dry compressing small diaphragm pumps from the PB-1 product line can be used for evacuating, conveying and compressing gases and vapours up to a final vacuum of **104 mbar**.

Six different ranges with further unique models are available within the product line.

The PB-1 product line is equipped with a single-cylinder diaphragm pump with con-rod drive, which carries out an oscillating, tumbling and rocking, upwards and downwards movement of the diaphragm. The diaphragm is fastened to a rigid con-rod and is subjected to a greater or lesser degree of flexing and stretching, depending on the length of the con-rod. The well-thought-out design of the drive offers the user a compact construction and low spatial requirements.

The range is further distinguished by quiet operation with proven long service life and maintenance-free operating time.


The materials used, such as aluminium for the gas-carrying components, stainless steel for the valves and VITON (FKM) for the diaphragms, open up a wide field of applications for non-aggressive gases. Other material combinations are available on request.



Technical data - PB 1

Series	MP48-H4-AW14	MP48-H5-AW14	MP48-H6-AW14	MP48-H4-AW26	MP48-H5-AW26	MP48-H6-AW26
Free flow	3,8 l/min	5,3 l/min	6 l/min	6,5 l/min	8,5 l/min	11,2 l/min
Final vacuum	200 mbar	110 mbar	120 mbar	220 mbar	190 mbar	104 mbar
Final pressure (abs.)	2,5 bar	3 bar		2,5 bar	3 bar	
Pump heads	1					
Hose coupling, suction / pressure	G 1/8"					
Motor power / r.p.m.	0,07 kW / 1400 min ⁻¹			0,09 kW / 2600 min ⁻¹		
Mains requirement / Frequencies	230 V - 50 Hz					
EX motor	not possible					
DC motor	on request					
Noise level	49 dBA to 57 dBA					
Permissible gas admission temp.	+ 5 C° to + 45 C°					
Permissible ambient temperature	+ 5 C° to + 45 C°					
Permissible ambient temperature motor	+ 5 C° to + 45 C°					
Permissible ambient temperature pump head	+ 5 C° to + 45 C°					
Dimensions L x W x H	137 mm x 80 mm x 140 mm					
Weight	1,8 kg					
Impermeable to gas	1 x 10 ⁻³					

vacuum

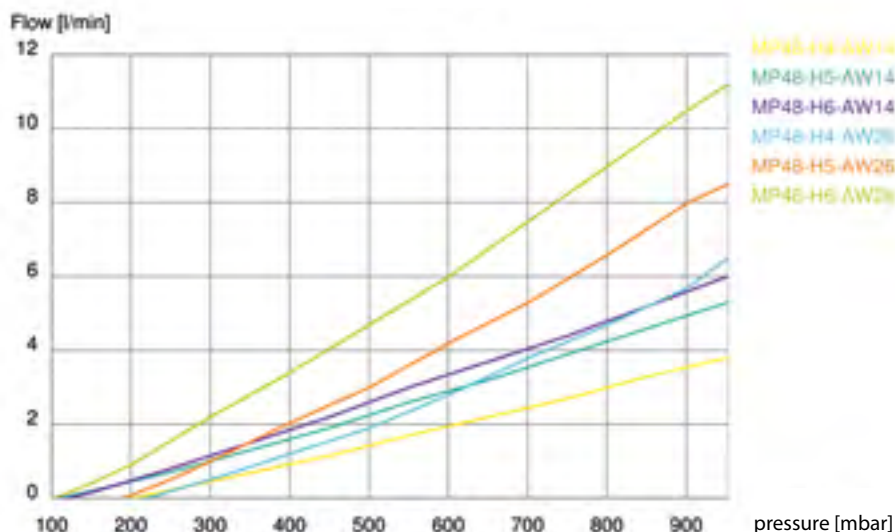

piston

1-cylinder




The oil-free and dry compressing small piston pumps from the PB-2 product line can be used for evacuating, conveying and compressing gases and vapours up to a final vacuum of **80 mbar**. Six different ranges with further unique models are available within the product line.

The piston, rigidly fixed to the con-rod, carries out a tilting motion in the cylinder when moving up and down. The piston rings are therefore more heavily stressed than with a linear drive. For this reason, with hyco® pumps the length of the con-rod from the eccentric shaft to the piston is designed to impart as small a tilting motion as possible to the piston. The eccentric shaft with con-rod is additionally ball-bearing mounted in the carrier plate and does not sit on the motor shaft. This ensures that the motor shaft and the A-side motor bearings are not loaded. This well-thought-out design also ensures a long service life for the mechanical components.

The materials used, such as aluminium for the gas-carrying components, stainless steel for the valves and PTFE for the pressure sleeves, open up a wide field of applications for non-aggressive gases.



pressure

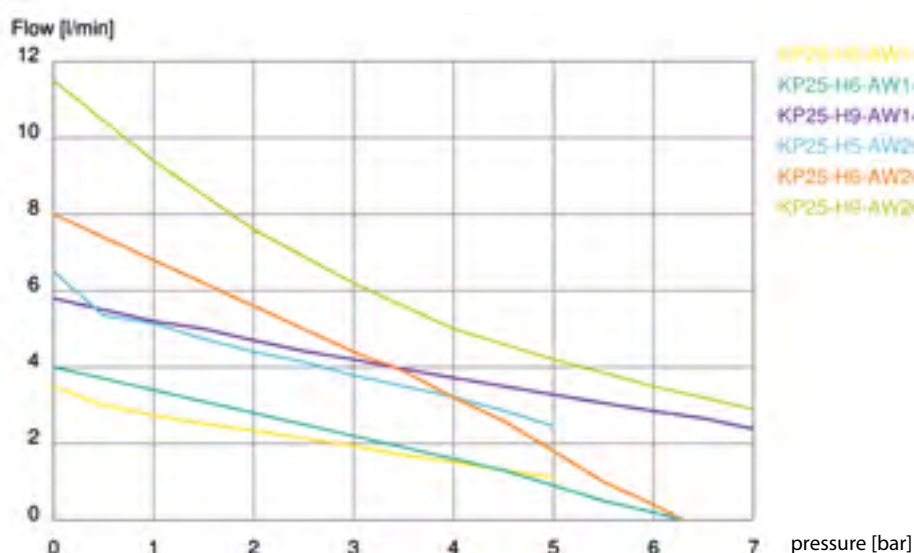

Technical data - PB 2

Series	KP25-H5-AW14	KP25-H6-AW14	KP25-H9-AW14	KP25-H5-AW26	KP25-H6-AW26	KP25-H9-AW26
Free flow	3,5 l/min	4 l/min	5,8 l/min	6,5 l/min	8 l/min	11 l/min
Final vacuum	120 mbar	128 mbar	80 mbar	120 mbar	128 mbar	80 mbar
Final pressure (abs.)	4 bar	6 bar		4 bar		
Pump heads	1					
Hose coupling, suction/pressure	G 1/8"					
Motor power / r.p.m.	0,07 kW / 1400 min ⁻¹			0,09 kW / 2600 min ⁻¹		
Mains requirement / Frequencies	230 V - 50 Hz					
EX motor	not possible					
DC motor	on request					
Noise level	49 dBA to 57 dBA					
Permissible gas admission temp.	+ 5 C° to + 45 C°					
Permissible ambient temp.	+ 5 C° to + 45 C°					
Permissible ambient temp. motor	+ 5 C° to + 45 C°					
Permissible ambient temp. pump head	+ 5 C° to + 45 C°					
Dimensions L x W x H	137 mm x 80 mm x 140 mm					
Weight	1,8 kg					
Impermeable to gas	not possible					

vacuum

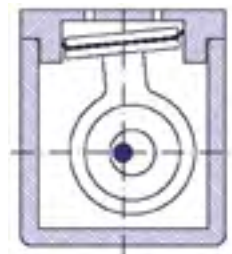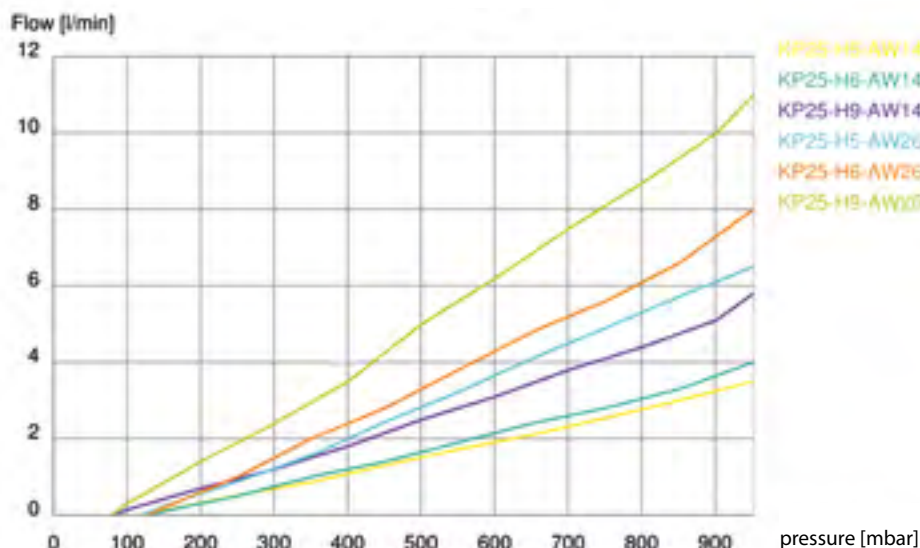

diaphragm


1-cylinder

The oil-free and dry compressing single-cylinder diaphragm pump from the PB-3 product line can be used for evacuating, conveying and compressing gases and vapours up to a final vacuum of **85 mbar**. Five different ranges with further unique models are available within the product line.

The PB-3 product line is equipped with a single-cylinder diaphragm pump with con-rod drive, which carries out an oscillating, tumbling and rocking, upwards and downwards movement of the diaphragm. The diaphragm is fastened to a rigid con-rod and is subjected to a greater or lesser degree of flexing and stretching, depending on the length of the con-rod. The well-thought-out design of the drive offers the user a compact construction and low spatial requirements.

The range is further distinguished by quiet operation with proven long service life and maintenance-free operating time.


The materials used, such as aluminium for the gas-carrying components, stainless steel for the valves and VITON (FKM) for the diaphragms, open up a wide field of applications for non-aggressive gases. Other material combinations are available on request.

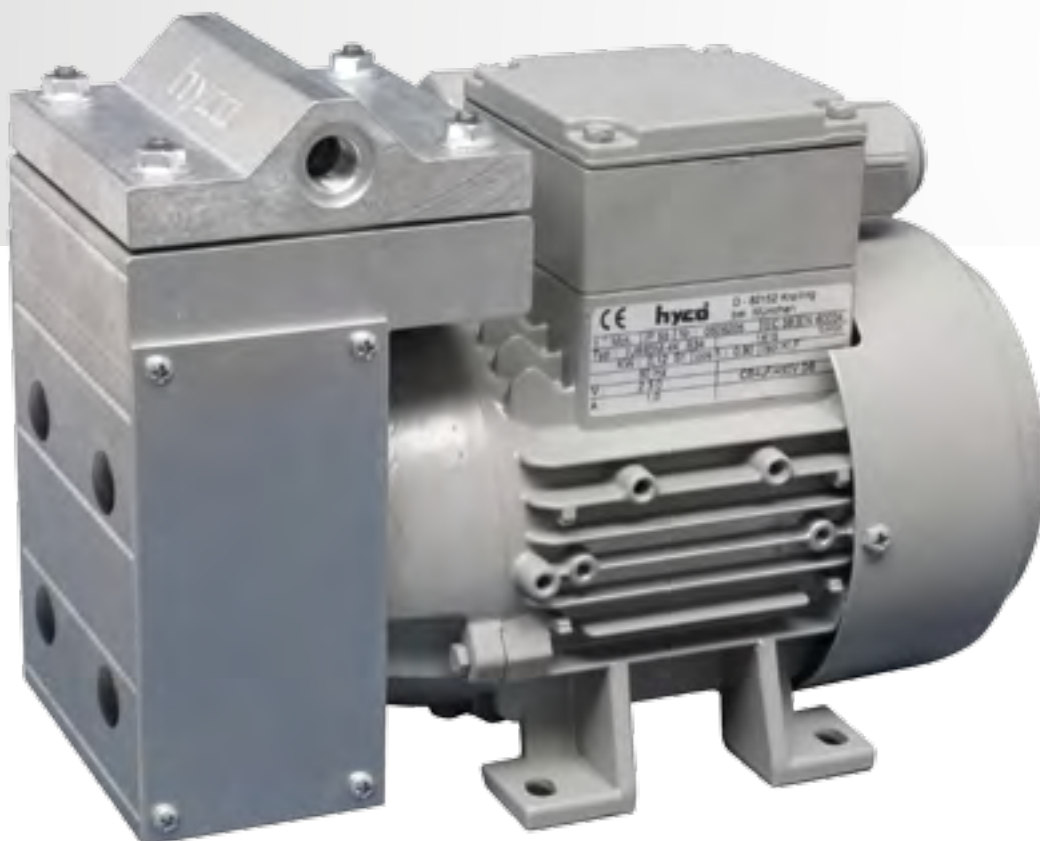

Technical data - PB 3

Series	MP65-H5-W14	MP75-H5-W14	MP75-H6-W14	MP86-H6-W14	MP86-H8-W14
Free flow	8,4 l/min	15,2 l/min	23,5 l/min	25,5 l/min	33 l/min
Final vacuum	150 mbar	120 mbar	95 mbar	125 mbar	85 mbar
Final pressure (abs.)	4 bar	3 bar		2 bar	
Pump heads	1				
Hose coupling, suction/pressure	G 1/4"				
Motor power / r.p.m.	0,12 kW / 1400 min ⁻¹				
Mains requirement / Frequencies	230 V - 50 Hz				
EX motor	not possible				
DC motor	on request				
Noise level	57 dBA to 59 dBA				
Permissible gas admission temp.	+ 5 C° to + 45 C°				
Permissible ambient temp.	+ 5 C° to + 45 C°				
Permissible ambient temp. motor	+ 5 C° to + 45 C°				
Permissible ambient temp. pump head	+ 5 C° to + 45 C°				
Dimensions L x W x H	239,5 mm x 120 mm x 179,5 mm				
Weight	4,5 kg				
Impermeable to gas	1 x 10 ⁻³				

vacuum

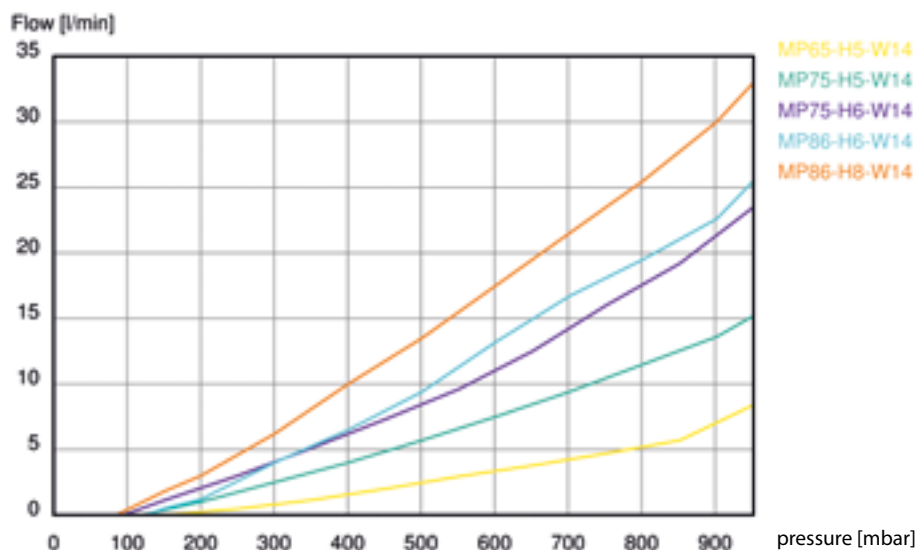

1-Cylinder Diaphragm Pump for hydraulic systems PB 17

diaphragm

1-cylinder

With the service diaphragm pump from the PB-17 hyco product range, maintenance and repair tasks for hydraulic systems can be carried out quickly and cleanly.

The PB-17 hyco vacuum pumps are connected to the filling ports of the hydraulic tank thus creating a vacuum in the air space inside the tank.

The vacuum is adjusted with the regulating valve attached to the pump such that a state of equilibrium is reached with the pressure of the oil column at the repair location. The system can be repaired or serviced without having to empty the hydraulic oil tank beforehand, without any loss of hydraulic oil and without environmental pollution.

The oil-free and dry compressing diaphragm pump for hydraulic systems from the PB-17 product line can be used for evacuating, conveying and compressing gases and vapours up to a final vacuum of **100 mbar**.



Technical data - PB 17

Series	P-184
Free flow	50 l/min
Final vacuum	100 mbar
Final pressure (abs.)	2 bar
Pump heads	1
Hose coupling, suction/pressure	G 1/4"
Motor power / r.p.m.	0,13 kW / 1400 min ⁻¹
Mains requirement / Frequencies	12VDC o. 24VDC
EX motor	on request
Noise level	57 dBA to 59 dBA
Permissible gas admission temp.	+ 5 C° to + 45 C°
Permissible ambient temp.	+ 5 C° to + 45 C°
Permissible ambient temp. motor	+ 5 C° to + 45 C°
Permissible ambient temp. pump head	+ 5 C° to + 45 C°
Dimensions L x W x H	180 mm x 106 mm x 75 mm
Weight	4 kg
Impermeable to gas	1 x 10 ⁻³



diaphragm

1-cylinder

The oil-free and dry compressing laboratory diaphragm pumps from the PB-18 product line can be used for evacuating, conveying and compressing gases and vapours up to a final vacuum of **85 mbar**. Three different ranges with further unique models are available within the product line.

The PB-18 product line is equipped with a single-cylinder diaphragm pump with con-rod drive, which carries out an oscillating, tumbling and rocking, upwards and downwards movement of the diaphragm. The diaphragm is fastened to a rigid con-rod and is subjected to a greater or lesser degree of flexing and stretching, depending on the length of the con-rod.

The range is further distinguished by quiet operation with proven long service life and maintenance-free operating time.


The materials used, such as aluminium for the gas-carrying components, stainless steel for the valves and VITON (FKM) for the diaphragms, open up a wide field of applications for non-aggressive gases. Other material combinations are available on request.



Technical data - PB 18

Series	LAB-11	LAB-21	LAB-31
Free flow	8,4 l/min	23,5 l/min	33 l/min
Final vacuum	150 mbar	95 mbar	85 mbar
Final pressure (abs.)	4 bar	3 bar	2 bar
Pump heads	1		
Hose coupling, suction/pressure	G 1/4"		
Motor power / r.p.m.	0,18 kW / 1400 min ⁻¹		
Mains requirement / Frequencies	230 V - 50 Hz		
EX motor	on request		
DC motor	on request		
Noise level	57 dBA to 59 dBA		
Permissible gas admission temp.	+ 5 C° to + 45 C°		
Permissible ambient temp.	+ 5 C° to + 45 C°		
Permissible ambient temp. motor	+ 5 C° to + 45 C°		
Permissible ambient temp. pump head	+ 5 C° to + 45 C°		
Dimensions L x W x H	251 mm x 178 mm x 218 mm		
Weight	4 kg		
Impermeable to gas	1 x 10 ⁻³		

vacuum

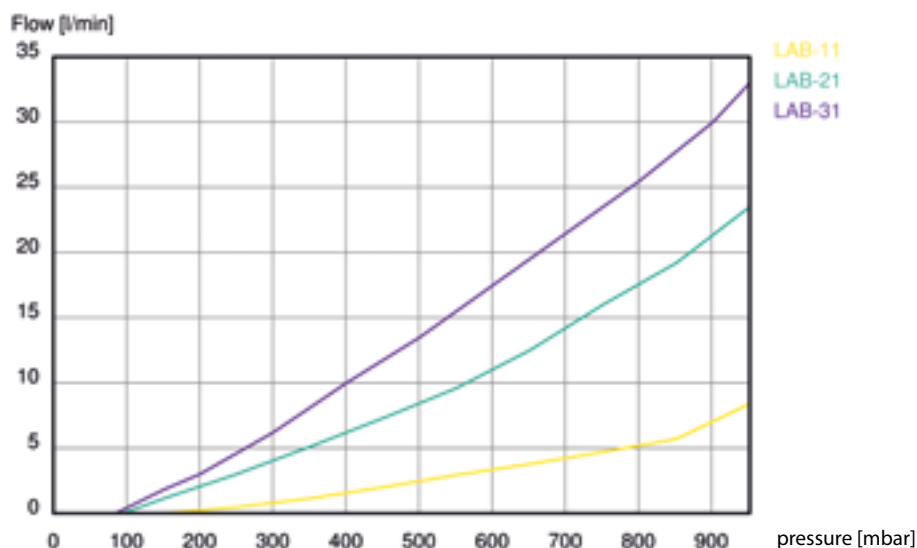

diaphragm


1-cylinder

The oil-free and dry compressing small diaphragm pumps from the PB-19 product line can be used for evacuating, conveying and compressing gases and vapours up to a final vacuum of **170 mbar**. Two different ranges are available within the product line.

The PB-19 product line is equipped with a single-cylinder diaphragm pump with con-rod drive, which carries out an oscillating, tumbling and rocking, upwards and downwards movement of the diaphragm. The diaphragm is fastened to a rigid con-rod and is subjected to a greater or lesser degree of flexing and stretching, depending on the length of the con-rod. The well-thought-out design of the drive offers the user a compact construction and low spatial requirements.

The range is further distinguished by quiet operation with proven long service life and maintenance-free operating time.


The materials used, such as aluminium for the gas-carrying components, stainless steel for the valves and VITON (FKM) for the diaphragms, open up a wide field of applications for non-aggressive gases. Other material combinations are available on request.

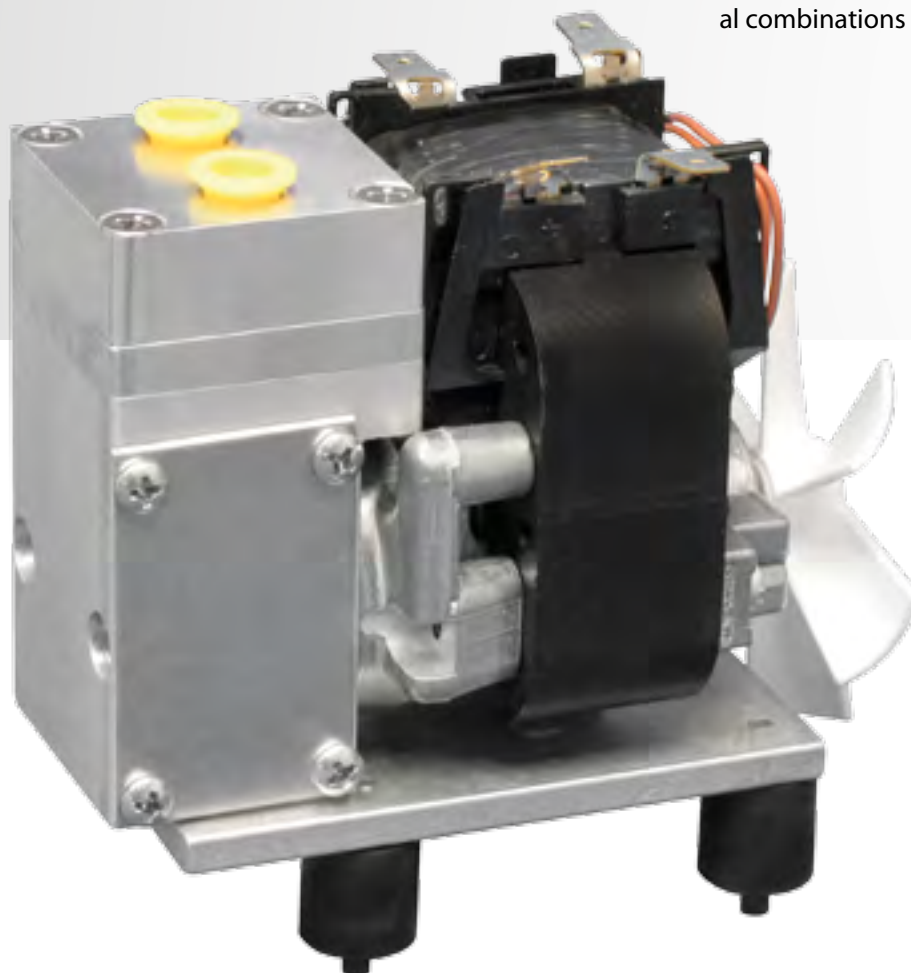

Technical data - PB 19

Series	MP38-H3,6-W26	MP38-H5-W26
Free flow	4 l/min	6 l/min
Final vacuum	270 mbar	170 mbar
Final pressure (abs.)	2 bar	
Pump heads	1	
Hose coupling, suction/pressure	G 1/8"	
Motor power / r.p.m.	0,09 kW / 2600 min ⁻¹	
Mains requirement / Frequencies	230 V - 50-60 Hz o. 115 V - 50-60 Hz	
EX motor	not possible	
DC motor	on request	
Noise level	49 dBA to 57 dBA	
Permissible gas admission temp.	+ 5 C° to + 45 C°	
Permissible ambient temp.	+ 5 C° to + 45 C°	
Permissible ambient temp. motor	+ 5 C° to + 45 C°	
Permissible ambient temp. pump head	+ 5 C° to + 45 C°	
Dimensions L x W x H	105 mm x 61 mm x 83 mm	
Weight	1,2 kg	
Impermeable to gas	1 x 10 ⁻³	

vacuum

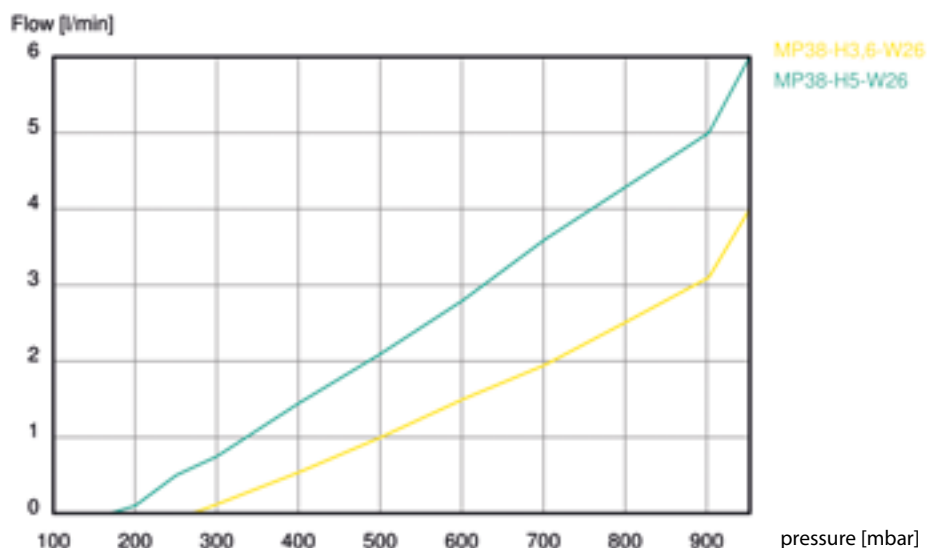

1-Cylinder Heatable Diaphragm Pump for sample gas PB 29

diaphragm

1-cylinder

The oil-free and dry compressing diaphragm pump for sample gas pumps from the PB-29 product line can be used for evacuating, conveying and compressing gases and vapours up to a final vacuum of **85 mbar**. Three different ranges are available within the product line.

The PB-29 product line is equipped with a single-cylinder diaphragm pump with linear drive. The staggering or flexing of the diaphragms is prevented here with precisely-straight upwards and downwards movement between the top dead centre and bottom dead centre. This ensures a long service life for the diaphragm. When compared to con-rod pumps with the same performance, diaphragm pumps are a more compact construction due to the omission of the long and rigid con-rods.

The range is further distinguished by quiet operation with proven long service life and maintenance-free operating time.



The materials used, such as aluminium for the gas-carrying components, stainless steel for the valves and VITON (FKM) for the diaphragms, open up a wide field of applications for non-aggressive gases. Other material combinations are available on request.



Technical data - PB 29

Series	CA2-ML65-W14	CA2-ML75-W14	CA2-ML86-W14
Free flow	17 l/min	42 l/min	33 l/min
Final vacuum	120 mbar	85 mbar	
Final pressure (abs.)	4 bar	3 bar	2 bar
Final pressure with KG-Gears	4 bar	3 bar	2 bar
Final pressure with PR-Gears	higher pressure on request		
Pump heads	1		
Hose coupling, suction/pressure	G 1/4" / NPT1/4"		
Motor power / r.p.m.	0,15 – 0,18 kW / 1400 min ⁻¹		
Mains requirement / Frequencies	230/400 V - 50 Hz o. 230 V - 50 Hz		
EX motor	on request		
DC motor	not possible		
Noise level	49 dBA to 53 dBA		
Permissible gas admission temp.	+ 5 C° bis + 200 C° (short times + 230 C°)		
Permissible ambient temp.	+ 5 C° to + 45 C°		
Permissible ambient temp. motor	+ 5 C° to + 45 C°		
Permissible ambient temp. pump head	+ 5 C° to + 200 C°		
Dimensions L x W x H	295,5 mm x 155,5 mm x 210 mm		
Weight	10 kg		
Impermeable to gas	1 x 10 ⁻³		

vacuum

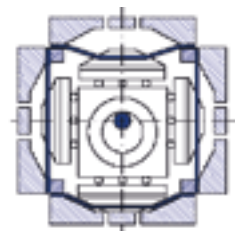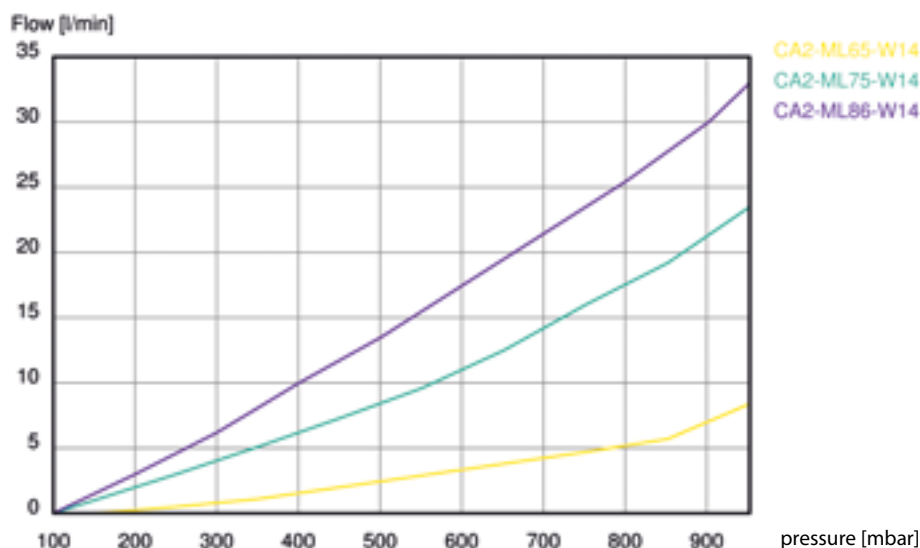

1-Zylinder Diaphragm Pump for housing mounting PB 30

diaphragm


1-cylinder

The oil-free and dry compressing diaphragm pump for housing mounting pumps from the PB-30 product line can be used for evacuating, conveying and compressing gases and vapours up to a final vacuum of **85 mbar**.

The PB-30 product line is equipped with a single-cylinder diaphragm pump with linear drive. The staggering or flexing of the diaphragms is prevented here with precisely-straight upwards and downwards movement between the top dead centre and bottom dead centre. This ensures a long service life for the diaphragm. When compared to con-rod pumps with the same performance, diaphragm pumps are a more compact construction due to the omission of the long and rigid con-rods.

The range is further distinguished by quiet operation with proven long service life and maintenance-free operating time.



The materials used, such as aluminium for the gas-carrying components, stainless steel for the valves and VITON (FKM) for the diaphragms, open up a wide field of applications for non-aggressive gases. Other material combinations are available on request.

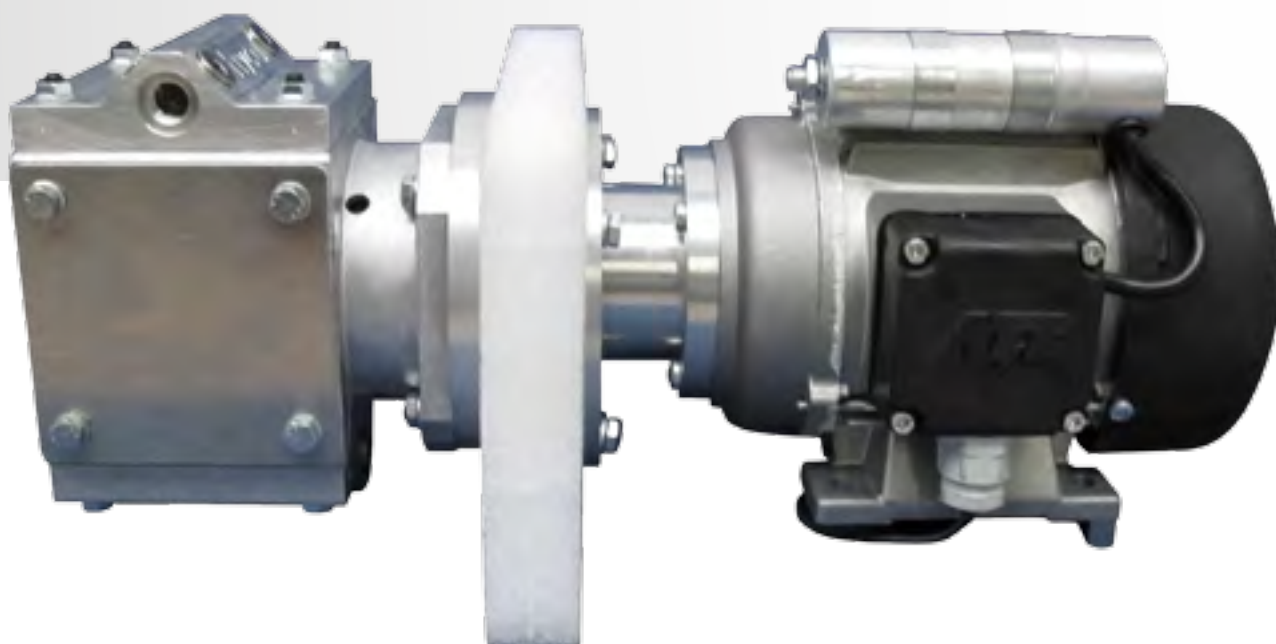

Technical data - PB 30

Series	ML65-W14	ML75-W14	ML86-W14
Free flow	17 l/min	42 l/min	33 l/min
Final vacuum	120 mbar	85 mbar	
Final pressure (abs.)	4 bar	3 bar	2 bar
Final pressure with KG-Gears	4 bar	3 bar	2 bar
Final pressure with PR-Gears	higher pressure on request		
Pump heads	1		
Hose coupling, suction/pressure	G 1/4" / NPT1/4"		
Motor power / r.p.m.	0,15 – 0,18 kW / 1400 min ⁻¹		
Mains requirement / Frequencies	230/400 V - 50 Hz o. 230 V - 50 Hz		
EX motor	on request		
DC motor	not possible		
Noise level	49 dBA to 53 dBA		
Permissible gas admission temp.	+ 5 C° to + 100 C°		
Permissible ambient temp.	+ 5 C° to + 45 C°		
Permissible ambient temp. motor	+ 5 C° to + 45 C°		
Permissible ambient temp. pump head	+ 5 C° to + 100 C°		
Dimensions L x W x H	386 mm x 120 mm x 182,5 mm		
Weight	10 kg		
Impermeable to gas	1 x 10 ⁻³		

vacuum

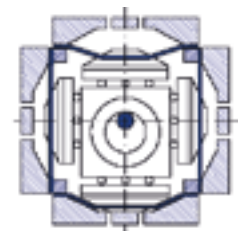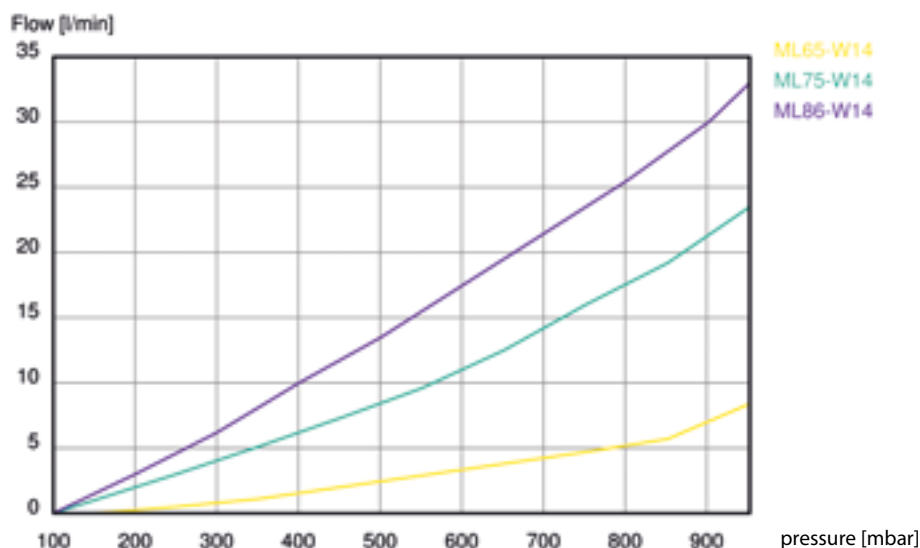

diaphragm

1-cylinder

The oil-free and dry compressing diaphragm pumps from the PB-31 product line can be used for evacuating, conveying and compressing gases and vapours up to a final vacuum of **85 mbar**. Three different ranges are available within the product line.

The PB-31 product line is equipped with a two-cylinder diaphragm pump with con-rod drive, which carries out an oscillating, tumbling and rocking, upwards and downwards movement of the diaphragm. The diaphragm is fastened to a rigid con-rod and is subjected to a greater or lesser degree of flexing and stretching, depending on the length of the con-rod. The well-thought-out design of the drive offers the user a compact construction and low spatial requirements.

The range is further distinguished by quiet operation with proven long service life and maintenance-free operating time.


The materials used, such as aluminium for the gas-carrying components, stainless steel for the valves and VITON (FKM) for the diaphragms, open up a wide field of applications for non-aggressive gases. Other material combinations are available on request.



Technical data - PB 31

Series	MPS65-H5-W14	MPS86-H8-W14	MPS75-H6-W14
Free flow	8,4 l/min	33 l/min	23,5 l/min
Final vacuum	150 mbar	85 mbar	95 mbar
Final pressure (abs.)	4 bar	2 bar	3 bar
Pump heads	1		
Hose coupling, suction/pressure	G 1/4"		
Motor power / r.p.m.	0,04 kW / 1400 min ⁻¹		
Mains requirement / Frequencies	230 V - 50 Hz		
EX motor	not possible		
DC motor	not possible		
Noise level	57 dBA to 59 dBA		
Permissible gas admission temp.	+ 5 C° to + 45 C°		
Permissible ambient temp.	+ 5 C° to + 45 C°		
Permissible ambient temp. motor	+ 5 C° to + 45 C°		
Permissible ambient temp. pump head	+ 5 C° to + 45 C°		
Dimensions L x W x H	204 mm x 119,5 mm x 157,5 mm		
Weight	3,5 kg		
Impermeable to gas	1 x 10 ⁻³		

vacuum

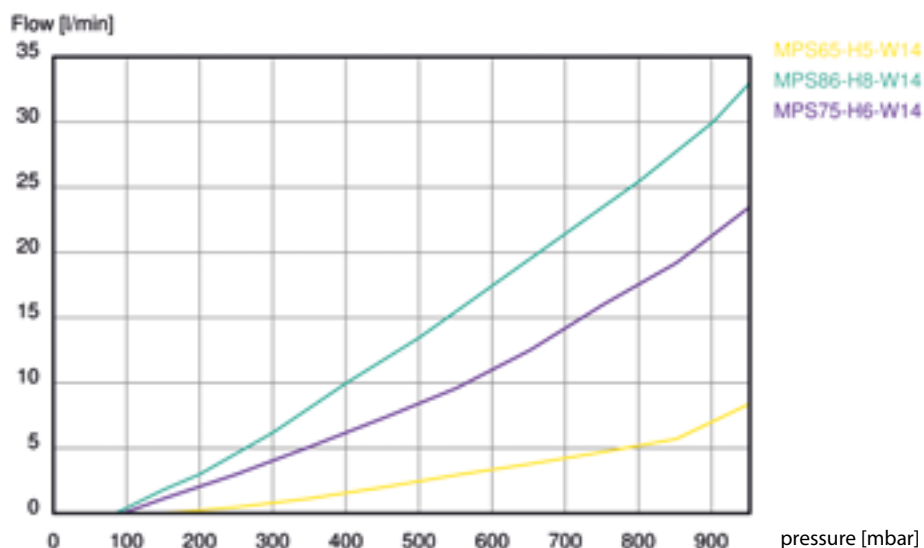

1-Cylinder Heatable Diaphragm Pump for sample gas PB 32

diaphragm

1-cylinder

The oil-free and dry compressing heatable diaphragm pumps for sample gas from the PB-32 product line can be used for evacuating, conveying and compressing gases and vapours up to a final vacuum of **104 mbar**. Four different ranges with further unique models are available within the product line. The pumps are thermally resistant until 230°C.

The PB-32 product line is equipped with a single-cylinder diaphragm pump with con-rod drive, which carries out an oscillating, tumbling and rocking, upwards and downwards movement of the diaphragm. The diaphragm is fastened to a rigid con-rod and is subjected to a greater or lesser degree of flexing and stretching, depending on the length of the con-rod. The well-thought-out design of the drive offers the user a compact construction and low spatial requirements.

The range is further distinguished by quiet operation with proven long service life and maintenance-free operating time.


The materials used, such as aluminium for the gas-carrying components, stainless steel for the valves and VITON (FKM) for the diaphragms, open up a wide field of applications for non-aggressive gases. Other material combinations are available on request.



Technical data - PB 32

Series	CA2-MP48-THR-H6-AW26	CA2-MP48-THR-H2-AW26	CA2-MP48-THR-H4-AW26	CA2-MP48-THR-H5-AW26
Free flow	11,2 l/min	3,5 l/min	6,5 l/min	8,5 l/min
Final vacuum	104 mbar	400 mbar	220 mbar	190 mbar
Final pressure (abs.)	3 bar	1 bar	2,5 bar	3 bar
Pump heads	1			
Hose coupling, suction/pressure	G 1/8"			
Motor power / r.p.m.	0,07 kW / 2600 min ⁻¹			
Mains requirement / Frequencies	230 V - 50 Hz			
EX motor	not possible			
DC motor	on request			
Noise level	49 dBA bis 57 dBA			
Permissible gas admission temp.	+ 5 C° bis + 200 C° (short time + 230 C°)			
Permissible ambient temp.	+ 5 C° to + 45 C°			
Permissible ambient temp. motor	+ 5 C° to + 45 C°			
Permissible ambient temp. pump head	+ 5 C° to + 200 C°			
Dimensions L x W x H	126 mm x 72 mm x 161,5 mm			
Weight	2 kg			
Impermeable to gas	1 x 10 ⁻³			

vacuum

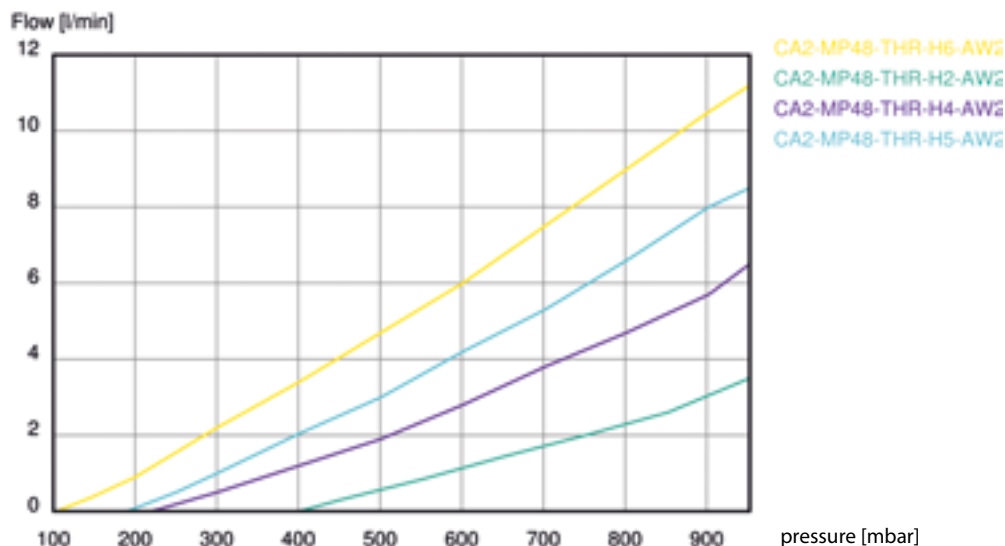

piston

1-cylinder




The oil-free and dry compressing piston pumps from the PB-35 product line can be used for evacuating, conveying and compressing gases and vapours up to a final vacuum of **105 mbar**. Four different ranges are available within the product line.

The PB-35 product line is equipped with a single-cylinder piston pump with con-rod drive. The piston, rigidly fixed to the con-rod, carries out a tilting motion in the cylinder when moving up and down. The piston rings are therefore more heavily stressed than with a linear drive. The length of the con-rod from the eccentric shaft to the piston is however designed to impart as small a tilting motion as possible to the piston. The eccentric shaft with con-rod is additionally ball-bearing mounted in the carrier plate and does not sit on the motor shaft. This ensures that the motor shaft and the A-side motor bearings are not loaded. This well-thought-out design also ensures a long service life for the mechanical components.

The materials used, such as aluminium for the gas-carrying components, stainless steel for the valves and PTFE for the pressure sleeves, open up a wide field of applications for non-aggressive gases.



pressure

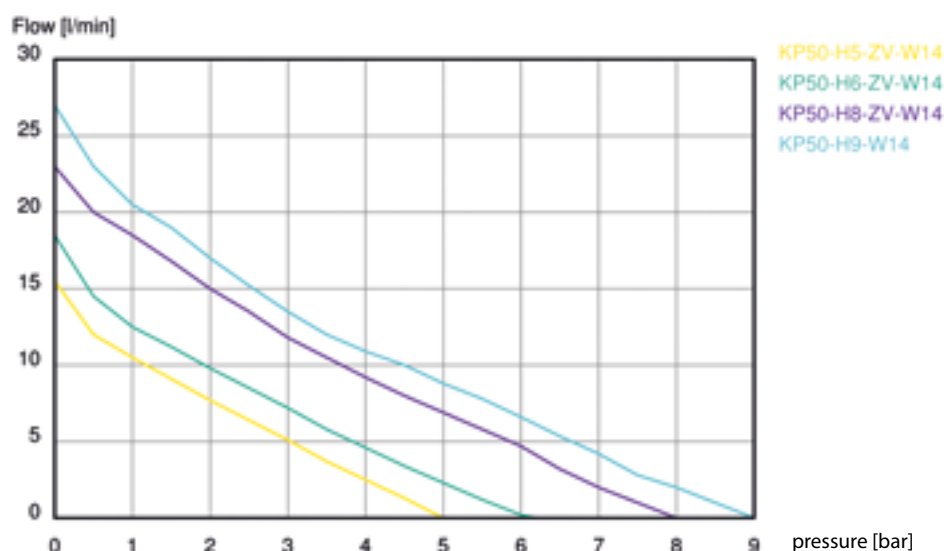

Technical data - PB 35

Series	KP50-H5-ZV-W14	KP50-H6-ZV-W14	KP50-H8-ZV-W14	KP50-H9-W14
Free flow	15,5 l/min	18,5 l/min	23 l/min	27 l/min
Final vacuum	155 mbar	140 mbar	120 mbar	105 mbar
Final pressure (abs.)	5 bar	6 bar	8 bar	
Pump heads	1			
Hose coupling, suction/pressure	G 1/4"			
Motor power / r.p.m.	0,21 kW / 1400 min ⁻¹			
Mains requirement / Frequencies	115 V - 50-60 Hz o. 230 V - 50-60 Hz			
EX motor	not possible			
DC motor	not possible			
Noise level	49 dBA to 57 dBA			
Permissible gas admission temp.	+ 5 C° to + 45 C°			
Permissible ambient temp.	+ 5 C° to + 45 C°			
Permissible ambient temp. motor	+ 5 C° to + 45 C°			
Permissible ambient temp. pump head	+ 5 C° to + 45 C°			
Dimensions L x W x H	197 mm x 134,5 mm x 173,5 mm			
Weight	6 kg			
Impermeable to gas	not possible			

vacuum

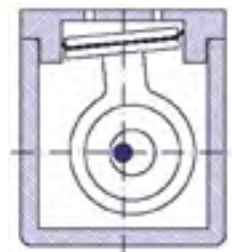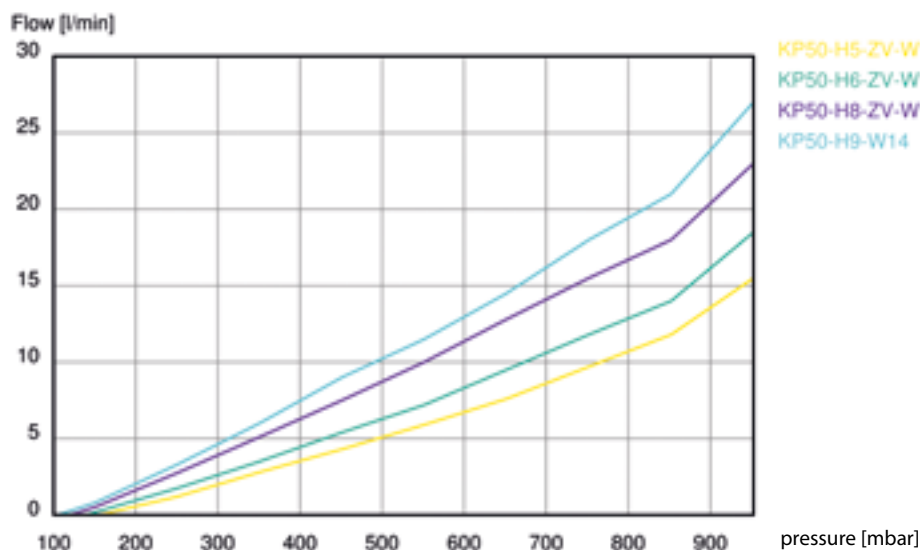

piston

1-cylinder




The oil-free and dry compressing piston pumps from the PB-36 product line can be used for evacuating, conveying and compressing gases and vapours up to a final vacuum of **90 mbar**. Four different ranges are available within the product line.

The PB-36 product line is equipped with a single-cylinder piston pump with con-rod drive. The piston, rigidly fixed to the con-rod, carries out a tilting motion in the cylinder when moving up and down. The piston rings are therefore more heavily stressed than with a linear drive. The length of the con-rod from the eccentric shaft to the piston is however designed to impart as small a tilting motion as possible to the piston. The eccentric shaft with con-rod is additionally ball-bearing mounted in the carrier plate and does not sit on the motor shaft. This ensures that the motor shaft and the A-side motor bearings are not loaded. This well-thought-out design also ensures a long service life for the mechanical components.

The materials used, such as aluminium for the gas-carrying components, stainless steel for the valves and PTFE for the pressure sleeves, open up a wide field of applications for non-aggressive gases.



pressure

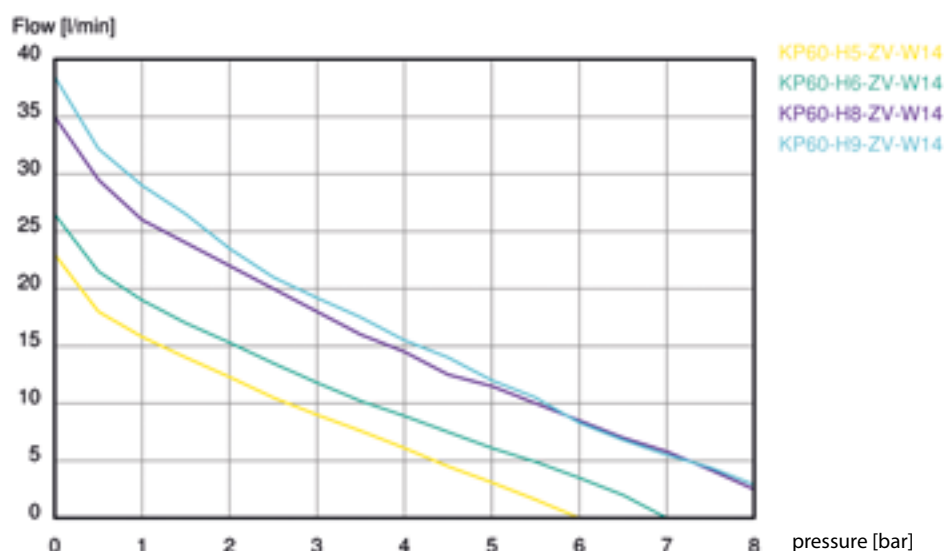

Technical data - PB 36

Series	KP60-H5-ZV-W14	KP60-H6-ZV-W14	KP60-H8-ZV-W14	KP60-H9-ZV-W14
Free flow	23 l/min	26,5 l/min	35 l/min	38,5 l/min
Final vacuum	130 mbar	120 mbar	100 mbar	90 mbar
Final pressure (abs.)	6 bar			
Pump heads	1			
Hose coupling, suction/pressure	G 1/4"			
Motor power / r.p.m.	0,21 kW / 1400 min ⁻¹			
Mains requirement / Frequencies	115 V - 50-60 Hz o. 230 V - 50-60 Hz			
EX motor	not possible			
DC motor	not possible			
Noise level	49 dBA to 57 dBA			
Permissible gas admission temp.	+ 5 C° to + 45 C°			
Permissible ambient temp.	+ 5 C° to + 45 C°			
Permissible ambient temp. motor	+ 5 C° to + 45 C°			
Permissible ambient temp. pump head	+ 5 C° to + 45 C°			
Dimensions L x W x H	197 mm x 134,5 mm x 173,5 mm			
Weight	6 kg			
Impermeable to gas	not possible			

vacuum

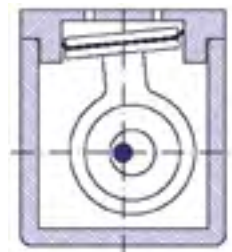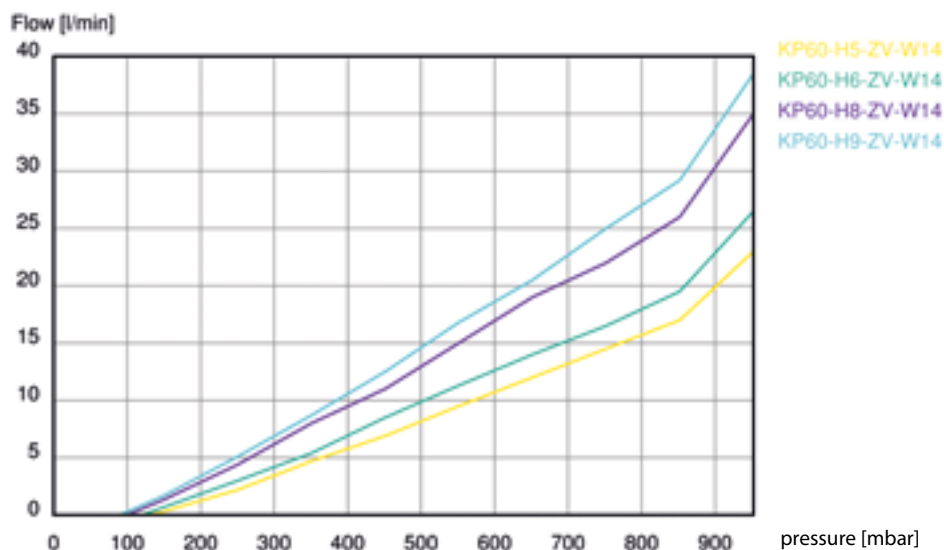

diaphragm

2-cylinder

The oil-free and dry compressing small diaphragm pumps from the PB-4 product line can be used for evacuating, conveying and compressing gases and vapours up to a final vacuum of **12 mbar**. Four different ranges are available within the product line.

The PB-4 product line is equipped with a two-cylinder diaphragm pump with linear drive. The staggering or flexing of the diaphragms is prevented here with precisely-straight upwards and downwards movement between the top dead centre and bottom dead centre. This ensures a long service life for the diaphragm. When compared to con-rod pumps with the same performance, diaphragm pumps are a more compact construction due to the omission of the long and rigid con-rods.

The range is further distinguished by quiet operation with proven long service life and maintenance-free operating time.



The materials used, such as aluminium for the gas-carrying components, stainless steel for the valves and VITON (FKM) for the diaphragms, open up a wide field of applications for non-aggressive gases. Other material combinations are available on request.



Technical data - PB 4

Series	ML48.22-AW14	ML48.23-AW14	ML48.22-AW26	ML48.23-AW26
Free flow	12,3 l/min	6,8 l/min	26 l/min	11,5 l/min
Final vacuum	100 mbar	12 mbar	85 mbar	12 mbar
Final pressure (abs.)	3 bar			
Pump heads	2			
Hose coupling, suction/pressure	G 1/8"			
Motor power / r.p.m.	0,07 kW / 1400 min ⁻¹		0,09 kW / 2600 min ⁻¹	
Mains requirement / Frequencies	230 V - 50 Hz			
EX motor	not possible			
DC motor	on request			
Noise level	49 dBA to 53 dBA			
Permissible gas admission temp.	+ 5 C° to + 45 C°			
Permissible ambient temp.	+ 5 C° to + 45 C°			
Permissible ambient temp. motor	+ 5 C° to + 45 C°			
Permissible ambient temp. pump head	+ 5 C° to + 45 C°			
Dimensions L x W x H	145 mm x 95 mm x 140 mm			
Weight	2,8 kg			
Impermeable to gas	1 x 10 ⁻³			

vacuum

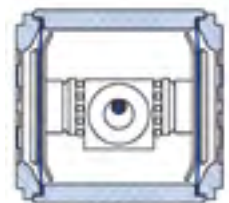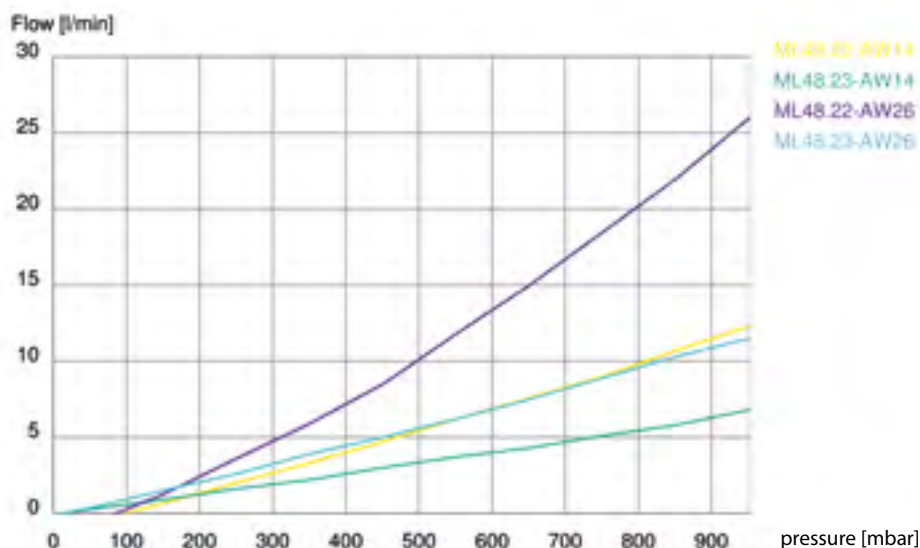

diaphragm

2-cylinder

The oil-free and dry compressing small piston pumps from the PB-6 product line can be used for evacuating, conveying and compressing gases and vapours up to a final vacuum of **8 mbar**. Seven different ranges are available within the product line.

The PB-6 product line is equipped with a two-cylinder diaphragm pump with linear drive. The staggering or flexing of the diaphragms is prevented here with precisely-straight upwards and downwards movement between the top dead centre and bottom dead centre. This ensures a long service life for the diaphragm. When compared to con-rod pumps with the same performance, diaphragm pumps are a more compact construction due to the omission of the long and rigid con-rods.

The range is further distinguished by quiet operation with proven long service life and maintenance-free operating time.



The materials used, such as aluminium for the gas-carrying components, stainless steel for the valves and piping and VITON (FKM) for the diaphragms, open up a wide field of applications for non-aggressive gases. Other material combinations are available on request.



Technical data - PB 6

Series	ML65. 22-H5-W14/15	ML65. 23-H5-D14	ML75. 22-H6-D14	ML75. 22-W14/0,15	ML75. 23-H6-D14	ML86. 22-H8-D14/18	ML86. 23-H8-D14/18
Free flow	17 l/min	8,5 l/min	42 l/min		21,5 l/min	65 l/min	33 l/min
Final vacuum	120 mbar	32 mbar	90 mbar	85 mbar	12 mbar	75 mbar	8 mbar
Final press. (abs.)	4 bar		3 bar			2 bar	
Final pressure with KG-Gears	4 bar		3 bar			2 bar	
Final pressure with PR-Gears				higher pressure on request			
Pump heads				2			
Hose coupling, suction/pressure				G 1/4"			
Motor power / r.p.m.				0,15 – 0,18 kW / 1400 min ⁻¹			
Mains requirement / Frequencies				230 V - 50 Hz o. 230/400 V - 50 Hz			
EX motor				on request			
DC motor				on request			
Noise level				49 dBA bis 53 dBA			
Permissible gas admission temp.				+ 5 C° to + 45 C°			
Permissible ambient temp.				+ 5 C° to + 45 C°			
Permissible ambient temp. motor				+ 5 C° to + 45 C°			
Permissible ambient temp. pump head				+ 5 C° to + 45 C°			
Dimensions L x W x H				300 mm x 175 mm x 173 mm			
Weight				8 kg			
Impermeable to gas				1 x 10 ⁻³			

vacuum

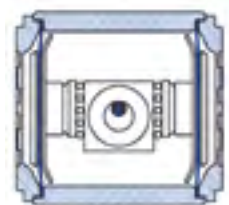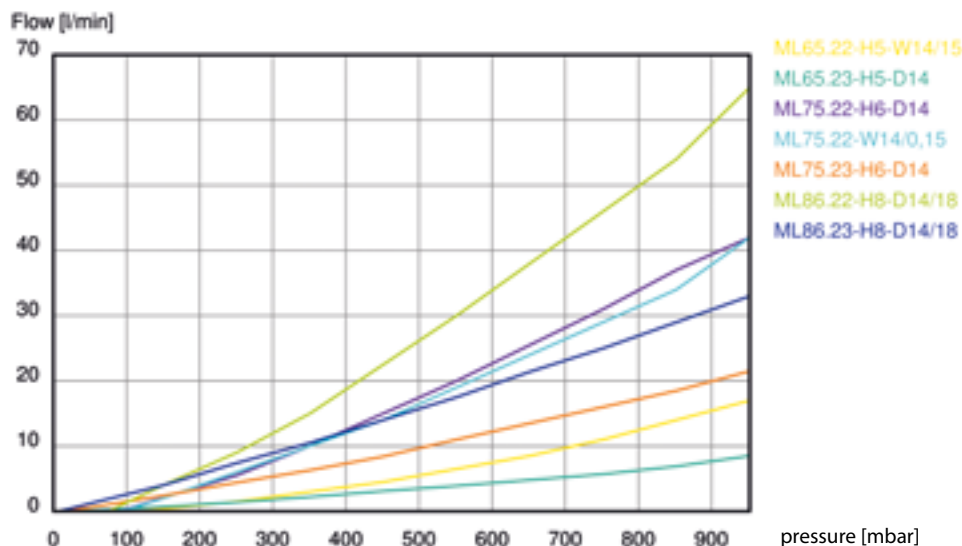

diaphragm

2-cylinder

The oil-free and dry compressing laboratory diaphragm pumps from the PB-21 product line can be used for evacuating, conveying and compressing gases and vapours up to a final vacuum of **8 mbar**. Six different ranges are available within the product line.

The PB-21 product line is equipped with a two-cylinder diaphragm pump with linear drive. The staggering or flexing of the diaphragms is prevented here with precisely-straight upwards and downwards movement between the top dead centre and bottom dead centre. This ensures a long service life for the diaphragm. When compared to con-rod pumps with the same performance, diaphragm pumps are a more compact construction due to the omission of the long and rigid con-rods.

The range is further distinguished by quiet operation with proven long service life and maintenance-free operating time.



The materials used, such as aluminium for the gas-carrying components, stainless steel for the valves and piping and VITON (FKM) for the diaphragms, open up a wide field of applications for non-aggressive gases. Other material combinations are available on request.



Technical data - PB 21

Series	LAB-323	LAB-122	LAB-123	LAB-222	LAB-223	LAB-322
Free flow	33 l/min	17 l/min	8,5 l/min	42 l/min	21,5 l/min	65 l/min
Final vacuum	8 mbar	120 mbar	32 mbar	90 mbar	12 mbar	75 mbar
Final press. (abs.)	2 bar	4 bar		3 bar		2 bar
Final pressure with KG-Gears	2 bar	4 bar		3 bar		2 bar
Final pressure with PR-Gears	higher pressure on request					
Pump heads	2					
Hose coupling, suction/pressure	G 1/4"					
Motor power / r.p.m.	0,16 kW / 1400 min ⁻¹					
Mains requirement / Frequencies	230 V - 50 Hz					
EX motor	not possible					
DC motor	not possible					
Noise level	49 dBA to 53 dBA					
Permissible gas admission temp.	+ 5 C° to + 45 C°					
Permissible ambient temp.	+ 5 C° to + 45 C°					
Permissible ambient temp. motor	+ 5 C° to + 45 C°					
Permissible ambient temp. pump head	+ 5 C° to + 45 C°					
Dimensions L x W x H	308 mm x 206 mm x 199 mm					
Weight	8 kg					
Impermeable to gas	1 x 10 ⁻³					

vacuum

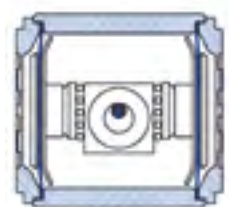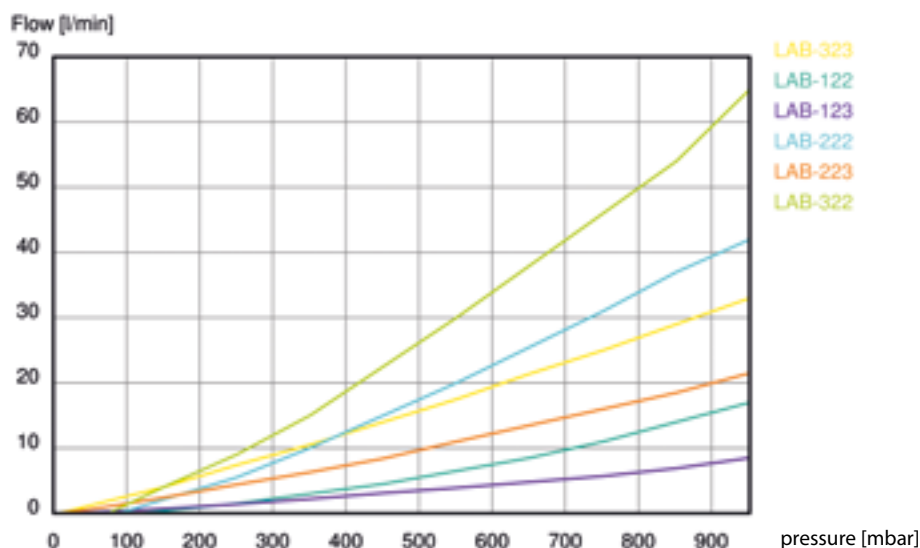

2-Cylinder Small Piston Pump PB 22

piston

2-cylinder


The oil-free and dry compressing small piston pumps from the PB-22 product line can be used for evacuating, conveying and compressing gases and vapours up to a final vacuum of **27 mbar**. Eight different ranges are available within the product line.

The PB-22 product line is equipped with a two-cylinder piston pump with linear drive. The straight guidance of the piston in the cylinder, between top dead centre and bottom dead centre, ensures that the piston sealing rings are evenly loaded all around. In contrast to the tilting movement, this achieves a long service life for the piston sealing rings and reliable sealing between piston and cylinder wall.

The materials used, such as aluminium for the gas-carrying components, stainless steel for the valves and PTFE for the pressure sleeves, open up a wide field of applications for non-aggressive gases.





pressure

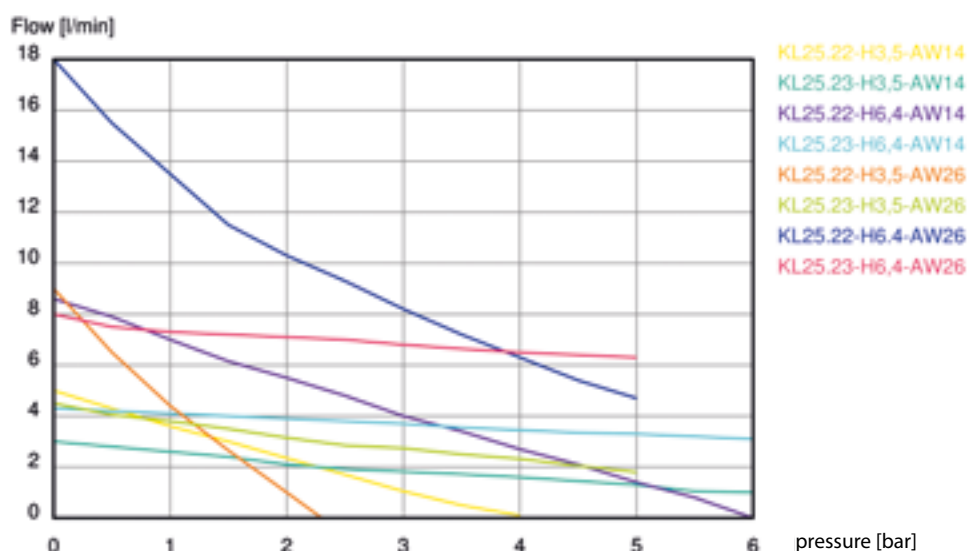

Technical data - PB 22

Series	KL25. 22-H3,5- AW14	KL25. 23-H3,5- AW14	KL25. 22-H6,4- AW14	KL25. 23-H6,4- AW14	KL25. 22-H3,5- AW26	KL25. 23-H3,5- AW26	KL25. 22-H6,4- AW26	KL25. 23-H6,4- AW26
Free flow	5 l/min	3 l/min	8,5 l/min	4,3 l/min	9 l/min	4,5 l/min	18 l/min	8 l/min
Final vacuum	320 mbar	120 mbar	140 mbar	27 mbar	318 mbar	120 mbar	130 mbar	27 mbar
Final press. (abs.)	4 bar	8 bar	5 bar	6 bar	4 bar			
Pump heads				4				
Hose coupling, suction/pressure				G 1/8"				
Motor power / r.p.m.				0,07 kW / 1400 min-1		0,09 kW / 2600 min-1		
Mains requirement / Frequencies				230 V - 50 Hz				
EX motor				not possible				
DC motor				on request				
Noise level				50 dBA to 53 dBA				
Permissible gas admission temp.				+ 5 C° to + 45 C°				
Permissible ambient temp.				+ 5 C° to + 45 C°				
Permissible ambient temp. motor				+ 5 C° to + 45 C°				
Permissible ambient temp. pump head				+ 5 C° to + 45 C°				
Dimensions L x W x H				145 mm x 95 mm x 140 mm				
Weight				2,8 kg				
Impermeable to gas				not possible				

vacuum

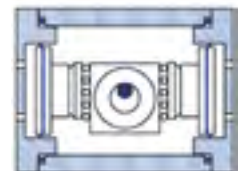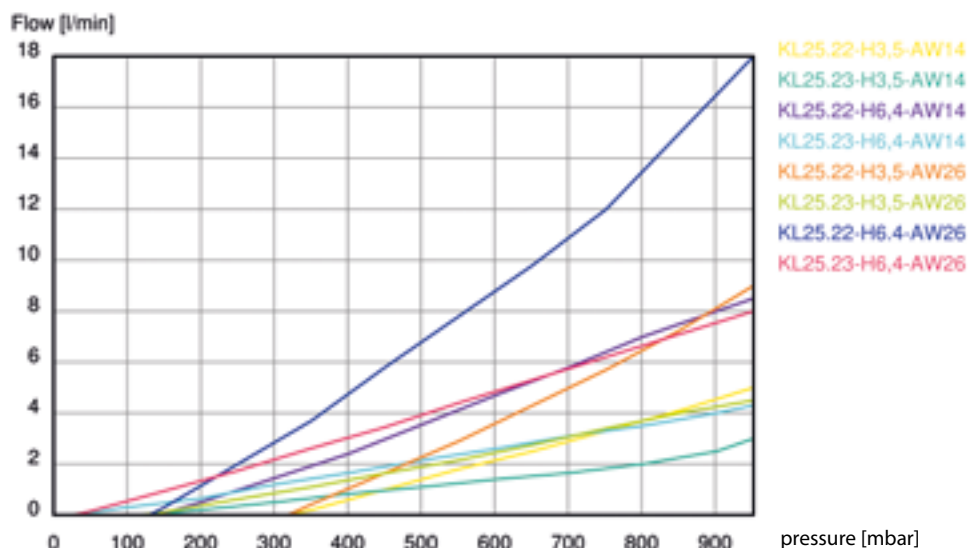

diaphragm

2-cylinder

The oil-free and dry compressing diaphragm pumps from the PB-23 product line can be used for evacuating, conveying and compressing gases and vapours up to a final vacuum of **10 mbar**. Six different ranges are available within the product line.

The PB-23 product line is equipped with a two-cylinder diaphragm pump with con-rod drive, which carries out an oscillating, tumbling and rocking, upwards and downwards movement of the diaphragm. The diaphragm is fastened to a rigid con-rod and is subjected to a greater or lesser degree of flexing and stretching, depending on the length of the con-rod. The well-thought-out design of the drive offers the user a compact construction and low spatial requirements.

The range is further distinguished by quiet operation with proven long service life and maintenance-free operating time.



The materials used, such as aluminium for the gas-conducting components, VITON (FKM) for the valves and the diaphragms, open up a wide range of application options with non-aggressive gases. Alternative EPDM or stainless steel for valves. Additional material combinations on request.



Technical data - PB 23

Series	MPZ65. 22-	MPZ65. 23-	MPZ75. 22-H6- 230V- 50Hz	MPZ75. 23-230V- 50Hz	MPZ86. 22- H8- W14	MPZ86. 23-230V- 50Hz
Free flow	17 l/min	8,5 l/min	41 l/min	22,5 l/min	65 l/min	33 l/min
Final vacuum	120 mbar	32 mbar	100 mbar	11 mbar	85 mbar	10 mbar
Final press. (abs.)	4 bar		2 bar		1 bar	
Pump heads	2					
Hose coupling, suction/pressure	G 1/4"					
Motor power / r.p.m.	0,09 kW / 1400 min ⁻¹					
Mains requirement / Frequencies	115 V - 50-60 Hz o. 230 V - 50-60 Hz					
EX motor	not possible					
DC motor	not possible					
Noise level	49 dBA to 53 dBA					
Permissible gas admission temp.	+ 5 C° to + 45 C°					
Permissible ambient temp.	+ 5 C° to + 45 C°					
Permissible ambient temp. motor	+ 5 C° to + 45 C°					
Permissible ambient temp. pump head	+ 5 C° to + 45 C°					
Dimensions L x W x H	234 mm x 131 mm x 159 mm					
Weight	5,5 kg					
Impermeable to gas	1 x 10 ⁻³					

vacuum

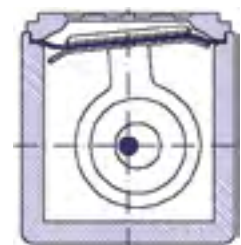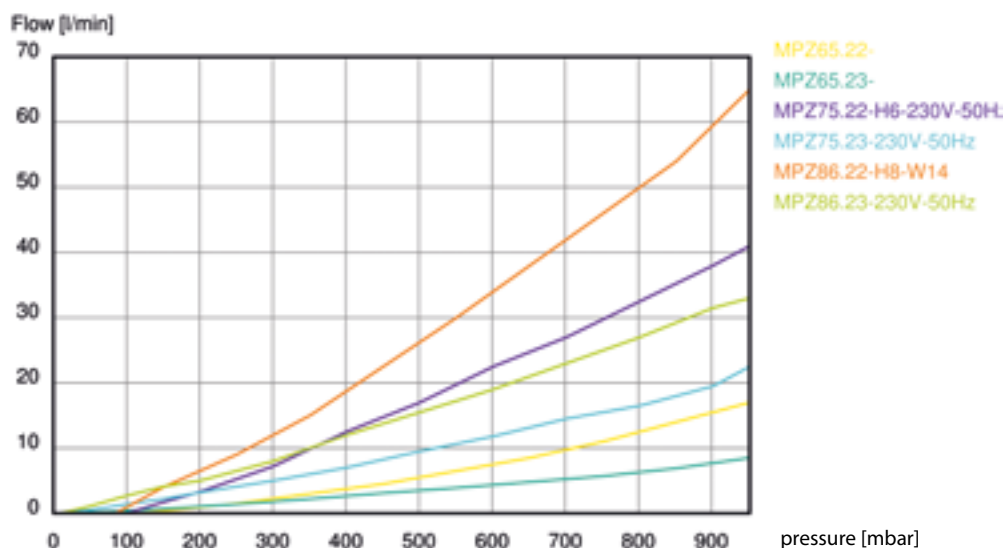

2-Cylinder PTFE-Laboratory Diaphragm Pump PB 28

diaphragm

2-cylinder

The oil-free and dry compressing PTFE laboratory diaphragm pumps from the PB-28 product line can be used for evacuating, conveying and compressing gases and vapours up to a final vacuum of **15 mbar**. Five different ranges are available within the product line.

The PB-28 product line is equipped with a two-cylinder diaphragm pump with con-rod drive, which carries out an oscillating, tumbling and rocking, upwards and downwards movement of the diaphragm. The diaphragm is fastened to a rigid con-rod and is subjected to a greater or lesser degree of flexing and stretching, depending on the length of the con-rod. The well-thought-out design of the drive offers the user a compact construction and low spatial requirements.

The range is further distinguished by quiet operation with proven long service life and maintenance-free operating time.


The materials used, such as PTFE for the gas-conducting components, Kelrez for the valves and VITON (FKM) for the diaphragms, open up a wide range of application options with non-aggressive gases.



Technical data - PB 28

Series	T- MPZ65.23- H5	T- MPZ75.23- H5	T- MPZ75.23- H6	T- MPZ86.23- H6	T- MPZ86.23- H8
Free flow	8,5 l/min	16 l/min	21,5 l/min	25,5 l/min	33 l/min
Final vacuum	45 mbar	20 mbar	25 mbar	20 mbar	15 mbar
Final press. (abs.)	3 bar	2 bar		1 bar	
Pump heads	2				
Hose coupling, suction/pressure	G 1/4" / NPT1/4"				
Motor power / r.p.m.	0,09 kW / 1400 min ⁻¹				
Mains requirement / Frequencies	115 V - 50-60 Hz o. 230 V - 50-60 Hz				
EX motor	not possible				
DC motor	not possible				
Noise level	49 dBA to 53 dBA				
Permissible gas admission temp.	+ 5 C° to + 45 C°				
Permissible ambient temp.	+ 5 C° to + 45 C°				
Permissible ambient temp. motor	+ 5 C° to + 45 C°				
Permissible ambient temp. pump head	+ 5 C° to + 45 C°				
Dimensions L x W x H	234 mm x 131 mm x 159 mm				
Weight	5,5 kg				
Impermeable to gas	1 x 10 ⁻³				


vacuum

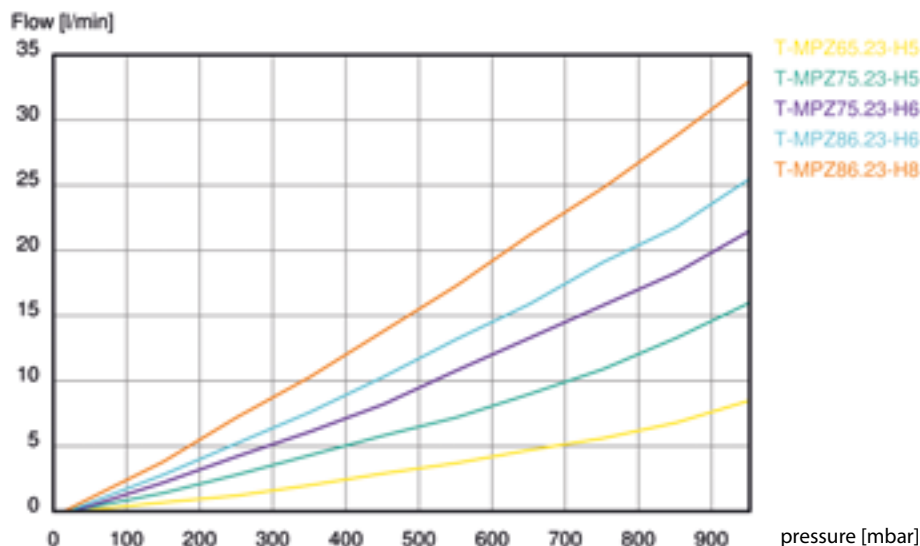

2-Cylinder Piston Pump PB 38

piston

2-cylinder

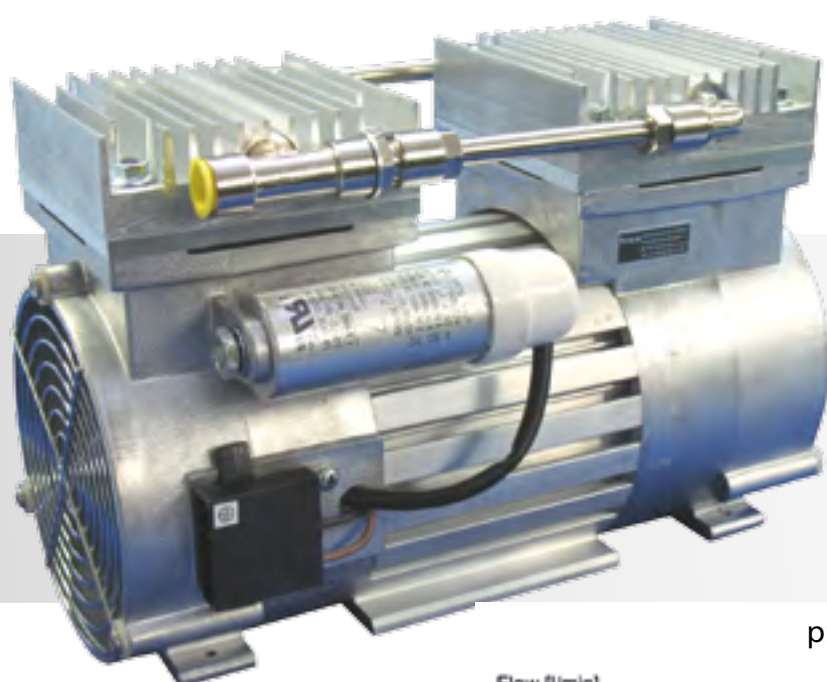


The oil-free and dry compressing small piston pumps from the PB-38 product line can be used for evacuating, conveying and compressing gases and vapours up to a final vacuum of **16 mbar**. Eight different ranges are available within the product line.

The PB-38 product line is equipped with a two-cylinder piston pump with con-rod drive. The piston, rigidly fixed to the con-rod, carries out a tilting motion in the cylinder when moving up and down. The piston rings are therefore more heavily stressed than with a linear drive. The length of the con-rod from the eccentric shaft to the piston is however designed to impart as small a tilting motion as possible to the piston. The eccentric shaft with con-rod is additionally ball-bearing mounted in the carrier plate and does not sit on the motor shaft. This ensures that the motor shaft and the A-side motor bearings are not loaded. This well-thought-out design also ensures a long service life for the mechanical components.

The materials used, such as aluminium for the gas-conducting components, stainless steel for the valves and piping and PTFE for the pressure sleeves, open up a wide range of application options with non-aggressive gases.



pressure

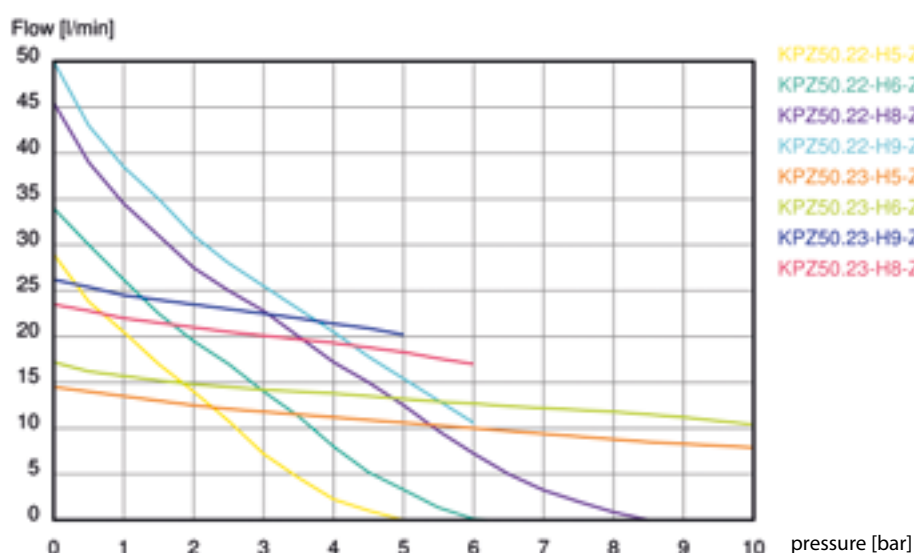

Technical data - PB 38

Series	KPZ50. 22-H5- ZV-W14	KPZ50. 22-H6- ZV-W14	KPZ50. 22-H8- ZV-W14	KPZ50. 22-H9- ZV-W14	KPZ50. 23-H5- ZV-W14	KPZ50. 23-H6- ZV-W14	KPZ50. 23-H9- ZV-W14	KPZ50. 23-H8- ZV-W14
Free flow	29 l/min	34 l/min	45,5 l/min	50 l/min	14,5 l/min	17,2 l/min	26,2 l/min	23,5 l/min
Final vacuum	160 mbar	150 mbar	125 mbar	100 mbar	45 mbar	35 mbar	16 mbar	20 mbar
Final press. (abs.)	5 bar	6 bar	8 bar				5 bar	6 bar
Pump heads				2				
Hose coupling, suction/pressure				G 1/4"				
Motor power / r.p.m.				0,21 kW / 1400 min ⁻¹				
Mains requirement / Frequencies				115 V - 50-60 Hz o. 230 V - 50-60 Hz				
EX motor				not possible				
DC motor				not possible				
Noise level				50 dBA to 53 dBA				
Permissible gas admission temp.				+ 5 C° to + 45 C°				
Permissible ambient temp.				+ 5 C° to + 45 C°				
Permissible ambient temp. motor				+ 5 C° to + 45 C°				
Permissible ambient temp. pump head				+ 5 C° to + 45 C°				
Dimensions L x W x H				255 mm x 134,5 mm x 173,5 mm				
Weight				8,3 kg				
Impermeable to gas				not possible				


vacuum

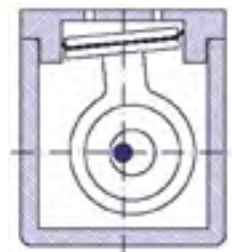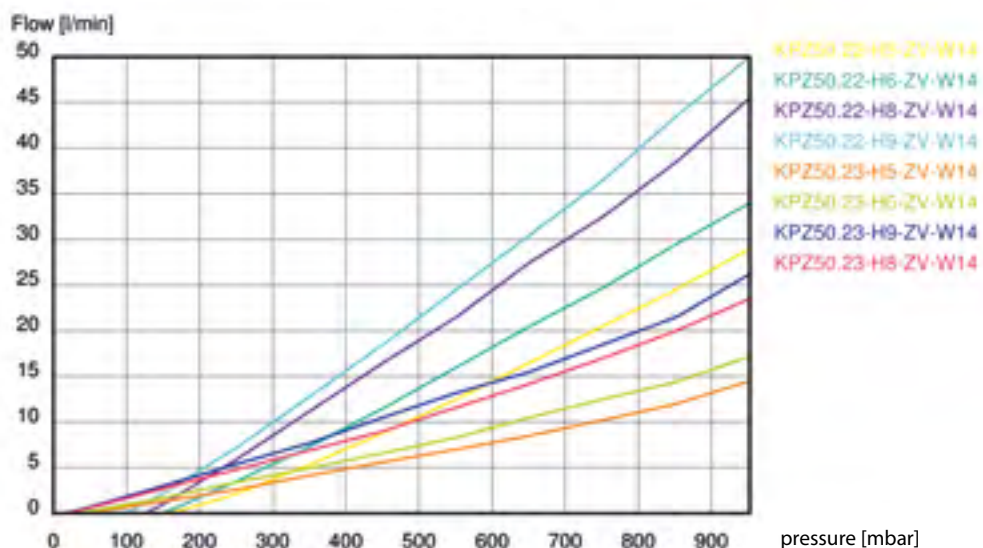

2-Cylinder Piston Pump PB 39

piston

2-cylinder

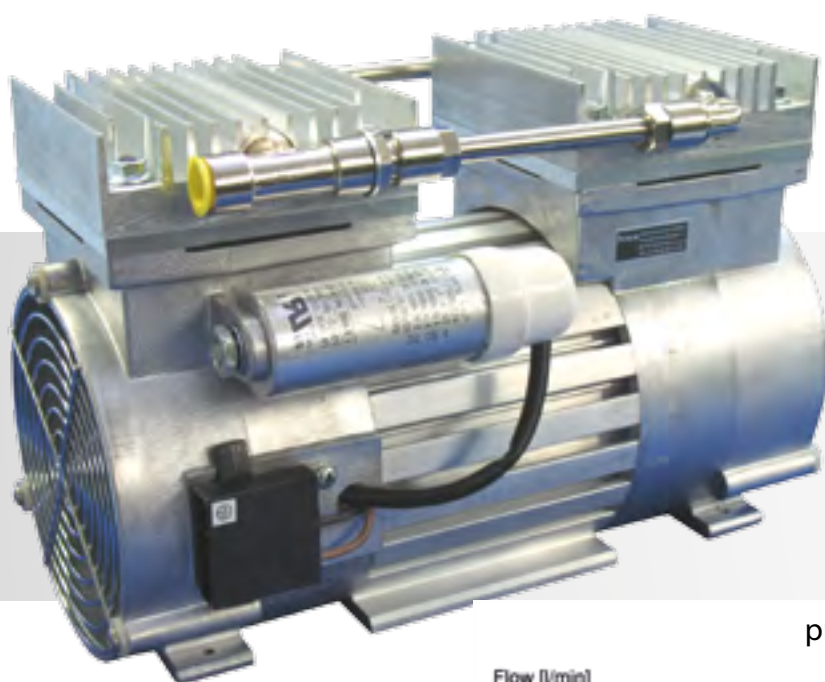


The oil-free and dry compressing piston pumps from the PB-39 product line can be used for evacuating, conveying and compressing gases and vapours up to a final vacuum of **15 mbar**. Eight different ranges are available within the product line.

The PB-39 product line is equipped with a two-cylinder piston pump with con-rod drive. The piston, rigidly fixed to the con-rod, carries out a tilting motion in the cylinder when moving up and down. The piston rings are therefore more heavily stressed than with a linear drive. The length of the con-rod from the eccentric shaft to the piston is however designed to impart as small a tilting motion as possible to the piston. The eccentric shaft with con-rod is additionally ball-bearing mounted in the carrier plate and does not sit on the motor shaft. This ensures that the motor shaft and the A-side motor bearings are not loaded. This well-thought-out design also ensures a long service life for the mechanical components.

The materials used, such as aluminium for the gas-conducting components, stainless steel for the valves and piping and PTFE for the pressure sleeves, open up a wide range of application options with non-aggressive gases.



pressure

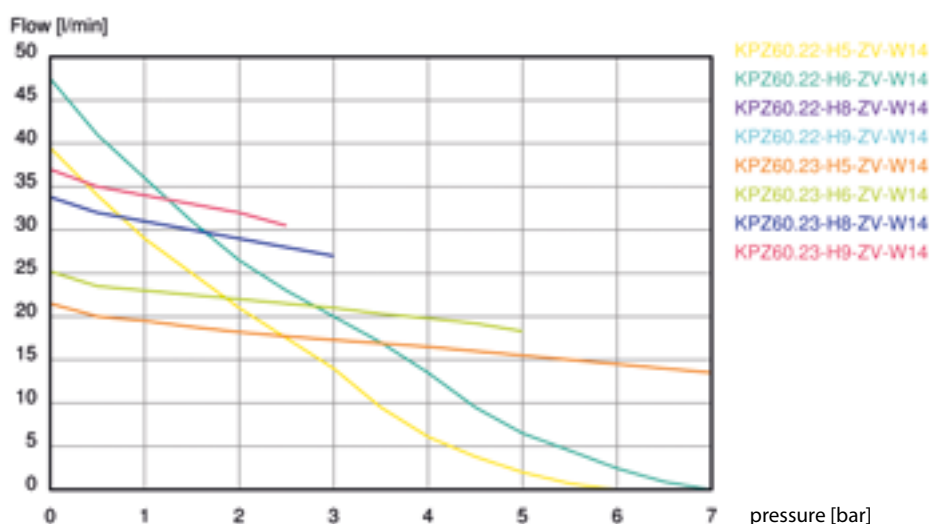

Technical data - PB 39

Series	KPZ60. 22-H5- ZV-W14	KPZ60. 22-H6- ZV-W14	KPZ60. 22-H8- ZV-W14	KPZ60. 22-H9- ZV-W14	KPZ60. 23-H5- ZV-W14	KPZ60.2 3-H6-ZV- W14	KPZ60. 23-H8- ZV-W14	KPZ60. 23-H9- ZV-W14
Free flow	39,5 l/min	47,5 l/min	63,5 l/min	72 l/min	21,5 l/min	25,2 l/min	33,8 l/min	37 l/min
Final vacuum	150 mbar	125 mbar	100 mbar	85 mbar	35 mbar	30 mbar	20 mbar	15 mbar
Final press. (abs.)	6 bar		1 bar		6 bar	5 bar	3 bar	2 bar
Pump heads				2				
Hose coupling, suction/pressure				G 1/4"				
Motor power / r.p.m.				0,21 kW / 1400 min ⁻¹				
Mains requirement / Frequencies				115 V - 50-60 Hz o. 230 V - 50-60 Hz				
EX motor				not possible				
DC motor				not possible				
Noise level				50 dBA to 53 dBA				
Permissible gas admission temp.				+ 5 C° to + 45 C°				
Permissible ambient temp.				+ 5 C° to + 45 C°				
Permissible ambient temp. motor				+ 5 C° to + 45 C°				
Permissible ambient temp. pump head				+ 5 C° to + 45 C°				
Dimensions L x W x H				255 mm x 134,5 mm x 173,5 mm				
Weight				8,3 kg				
Impermeable to gas				not possible				

vacuum

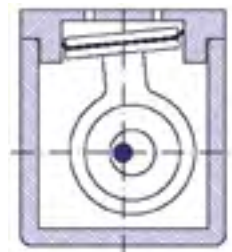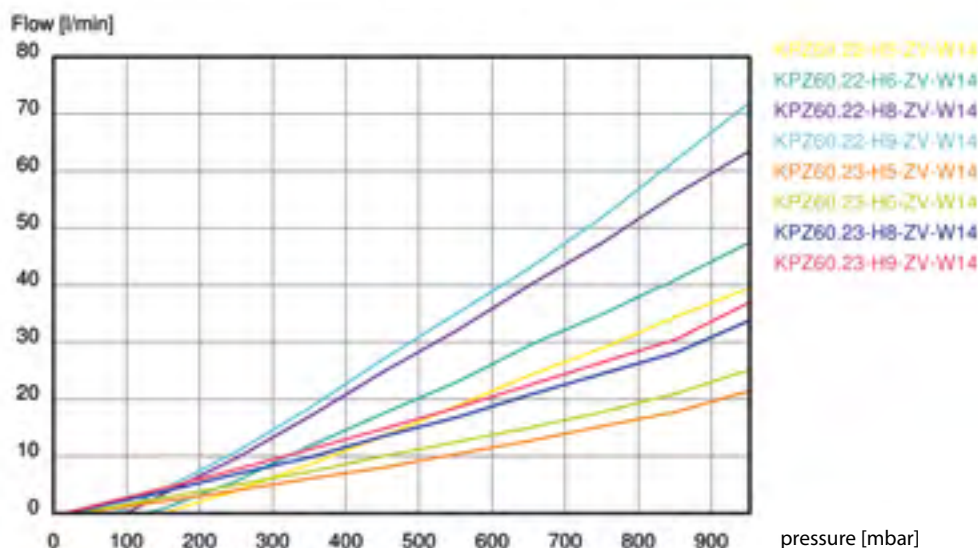

diaphragm


2-cylinder

The PB-42 range of oil-free and dry-sealed linear-diaphragm pumps with **magnetic-coupled drives**, provide lossless evacuation and sealing of rare and thus cost-intensive gases and vapours, such as Helium-3 for example. Six different models are available in the production range.

The PB-42 product range is equipped with a two-cylinder diaphragm pump. Hermetic sealing is now possible thanks to the new magnetically coupled drive developed and employed for the first time by hyco Vakuum-technik. The pump runs more quietly.

There are no losses in the event of a pump diaphragm rupture as there is no gases or vapour escape thanks to the design principle. Contactless conveyance is guaranteed as a mechanical transfer through the displacement of the pump has been completely dispensed with and there is also additional sealing from the motor.



The materials used, such as aluminium for the gas-carrying components, stainless steel for the valves and piping and VITON (FKM) for the diaphragms, open up a wide field of applications for non-aggressive gases. Other material combinations are available on request.

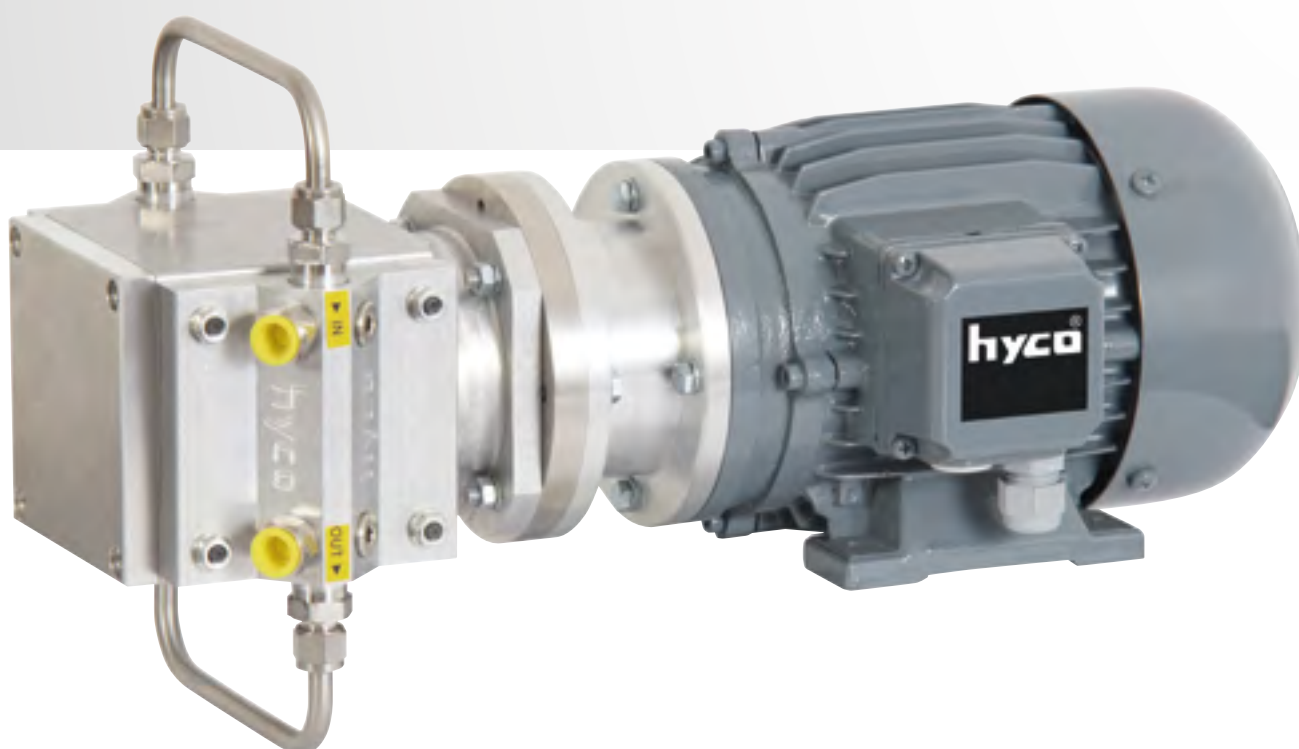

Technical data - PB 42

Series	ML65.22	ML65.23	ML75.22	ML75.23	ML86.23	ML86.22
Free flow	17 l/min	8,5 l/min	42 l/min	21,5 l/min	33 l/min	65 l/min
Final vacuum	150 mbar	35 mbar	85 mbar	15 mbar	7 mbar	80 mbar
Final pressure with KG-Gears	3 bar		2 bar		1 bar	
Pump heads	2					
Hose coupling, suction/pressure	G 1/4"					
Motor power / r.p.m.	0,37 kW / 1400 min ⁻¹					
Mains requirement / Frequencies	230 V - 50 Hz o. 230/400 V - 50 Hz					
EX motor	on request					
Noise level	49 dBA to 53 dBA					
Permissible gas admission temp.	+ 5 C° to + 45 C°					
Permissible ambient temp.	+ 5 C° to + 45 C°					
Dimensions L x W x H	406,5 mm x 175 mm x 210 mm					
Weight	15 kg					
Impermeable to gas	to 1 x 10 ⁻⁵ mbar x l/s					

vacuum

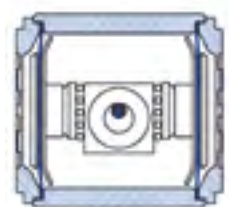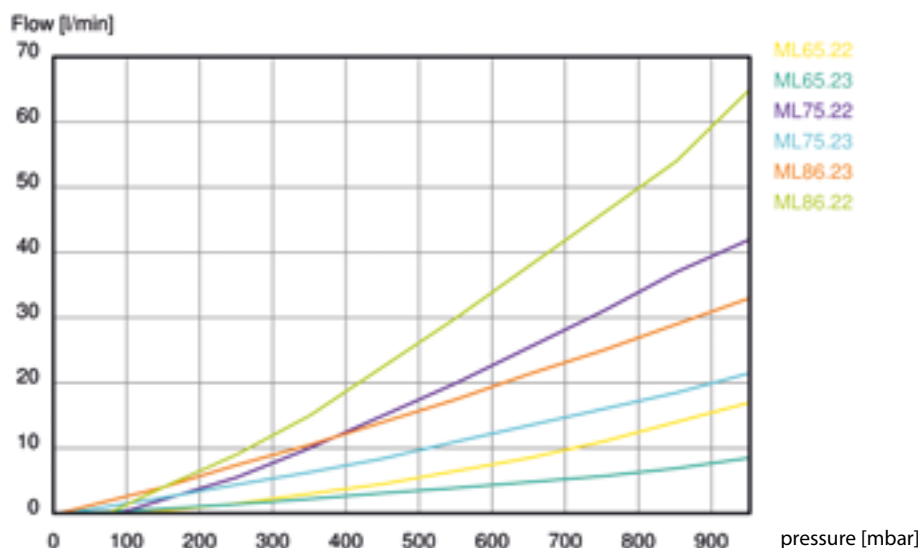

4-Cylinder Small Diaphragm Pump PB 5

diaphragm

4-cylinder

The oil-free and dry compressing small piston pumps from the PB-5 product line can be used for evacuating, conveying and compressing gases and vapours up to a final vacuum of **3 mbar**. Nine different ranges are available within the product line.

The PB-5 product line is equipped with a four-cylinder diaphragm pump with linear drive. The staggering or flexing of the diaphragms is prevented here with precisely-straight upwards and downwards movement between the top dead centre and bottom dead centre. This ensures a long service life for the diaphragm. When compared to con-rod pumps with the same performance, diaphragm pumps are a more compact construction due to the omission of the long and rigid con-rods.

The range is further distinguished by quiet operation with proven long service life and maintenance-free operating time.



The materials used, such as aluminium for the gas-carrying components, stainless steel for the valves and VITON (FKM) for the diaphragms, open up a wide field of applications for non-aggressive gases. Other material combinations are available on request.



Technical Data - PB 5

Series	MLH48. 45-AW14	MLH48. 46-AW14	MLH48. 48-AW14	MLH48. 45-AW26	MLH48. 48-AW26	MLH48. 46-AW26
Free flow	25 l/min	13 l/min	11 l/min	37 l/min	23,5 l/min	26 l/min
Final vacuum	95 mbar	12 mbar	3 mbar	95 mbar	3 mbar	12 mbar
Final press. (abs.)	2 bar					
Pump heads	4					
Hose coupling, suction/pressure	G 1/8"					
Motor power / r.p.m.	0,07 kW / 1400 min ⁻¹			0,09 kW / 2600 min ⁻¹		
Mains requirement / Frequencies	230 V - 50 Hz					
EX motor	not possible					
DC motor	on request					
Noise level	49 dBA to 53 dBA					
Permissible gas admission temp.	+ 5 C° to + 45 C°					
Permissible ambient temp.	+ 5 C° to + 45 C°					
Permissible ambient temp. motor	+ 5 C° to + 45 C°					
Permissible ambient temp. pump head	+ 5 C° to + 45 C°					
Dimensions L x W x H	140 mm x 140 mm x 145 mm					
Weight	3 kg					
Impermeable to gas	1 x 10 ⁻³					

vacuum

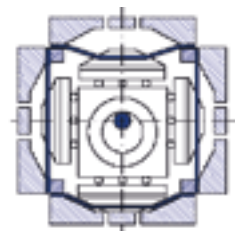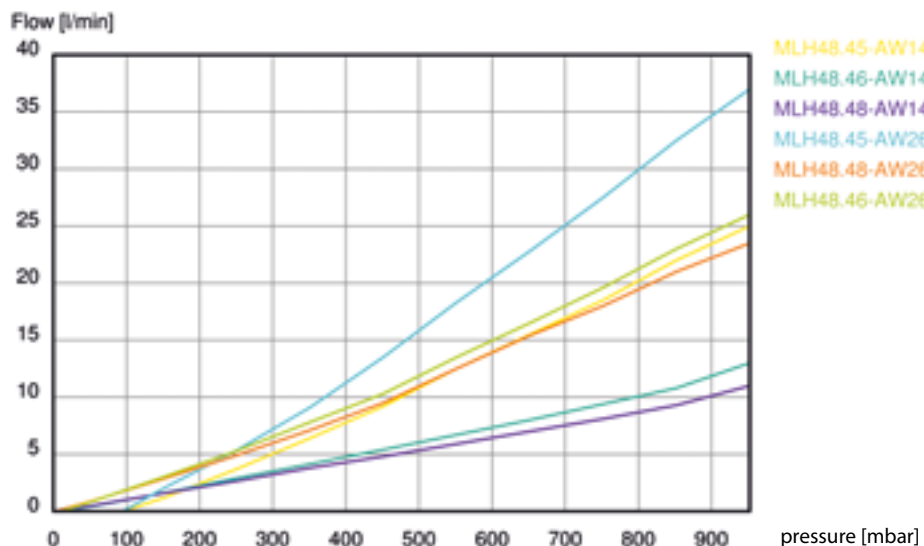

diaphragm

4-cylinder

The oil-free and dry compressing diaphragm pumps from the PB-7 product line can be used for evacuating, conveying and compressing gases and vapours up to a final vacuum of **1 mbar**. Six different ranges with further unique models are available within the product line.

The PB-7 product line is equipped with a four-cylinder diaphragm pump with linear drive. The staggering or flexing of the diaphragms is prevented here with precisely-straight upwards and downwards movement between the top dead centre and bottom dead centre. This ensures a long service life for the diaphragm. When compared to con-rod pumps with the same performance, diaphragm pumps are a more compact construction due to the omission of the long and rigid con-rods.

The range is further distinguished by quiet operation with proven long service life and maintenance-free operating time.



The materials used, such as aluminium for the gas-carrying components, stainless steel for the valves and piping and VITON (FKM) for the diaphragms, open up a wide field of applications for non-aggressive gases. Other material combinations are available on request.



Technical Data - PB 7

Series	ML-75. 45-H6- D14/37	ML-75. 46-H6- D14/37	ML-75. 48-H6- D14/37	ML-86. 45-H8- D14/37	ML-86. 46 -H8- D14/37	ML-86. 48- D14/37
Free flow	80 l/min	47 l/min	37 l/min	112 l/min	69,5 l/min	55 l/min
Final vacuum	80 mbar	15 mbar	7 mbar	80 mbar	7 mbar	1 mbar
Final press. (abs.)	3 bar			2 bar		
Final pressure with KG-Gears	3 bar			2 bar		
Final pressure with PR-Gears	higher pressure on request					
Pump heads	4					
Hose coupling, suction/pressure	G 1/4"					
Motor power / r.p.m.	0,37 – 0,75 kW / 1400 min ⁻¹					
Mains requirement / Frequencies	230 V - 50 Hz o. 230/400 V - 50 Hz					
EX motor	on request					
DC motor	not possible					
Noise level	57 dBA to 59 dBA					
Permissible gas admission temp.	+ 5 C° to + 45 C°					
Permissible ambient temp.	+ 5 C° to + 45 C°					
Permissible ambient temp. motor	+ 5 C° to + 45 C°					
Permissible ambient temp. pump head	+ 5 C° to + 45 C°					
Dimensions L x W x H	361 mm x 243 mm x 248 mm					
Weight	13 kg					
Impermeable to gas	1 x 10 ⁻³					

vacuum

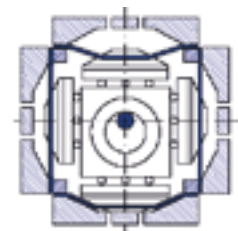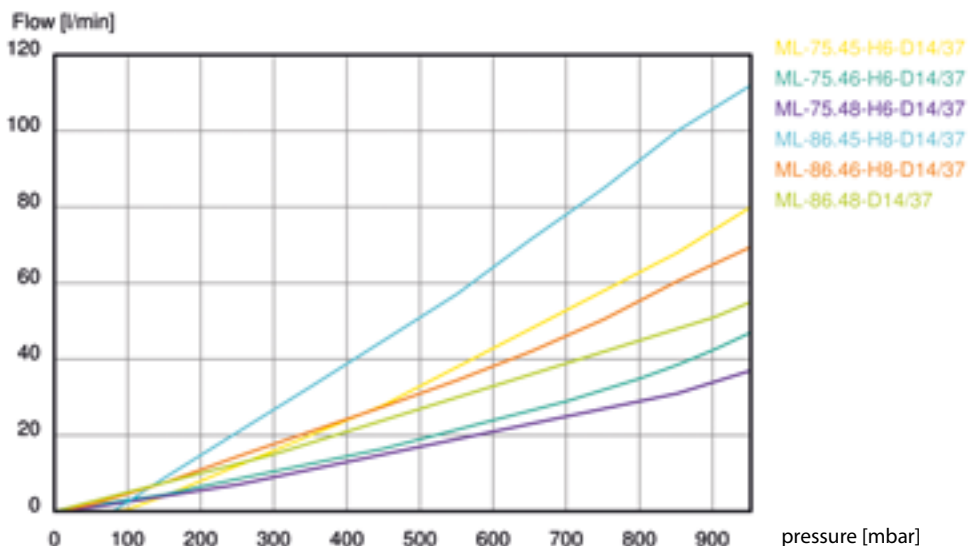

diaphragm


4-cylinder

The oil-free and dry compressing diaphragm pumps from the PB-8 product line can be used for evacuating, conveying and compressing gases and vapours up to a final vacuum of **2 mbar**.

The PB-8 product line is equipped with a four-cylinder diaphragm pump with linear drive. The staggering or flexing of the diaphragms is prevented here with precisely-straight upwards and downwards movement between the top dead centre and bottom dead centre. This ensures a long service life for the diaphragm. When compared to con-rod pumps with the same performance, diaphragm pumps are a more compact construction due to the omission of the long and rigid con-rods.

The range is further distinguished by quiet operation with proven long service life and maintenance-free operating time.



The materials used, such as aluminium for the gas-carrying components, stainless steel for the valves and piping and VITON (FKM) for the diaphragms, open up a wide field of applications for non-aggressive gases. Other material combinations are available on request.

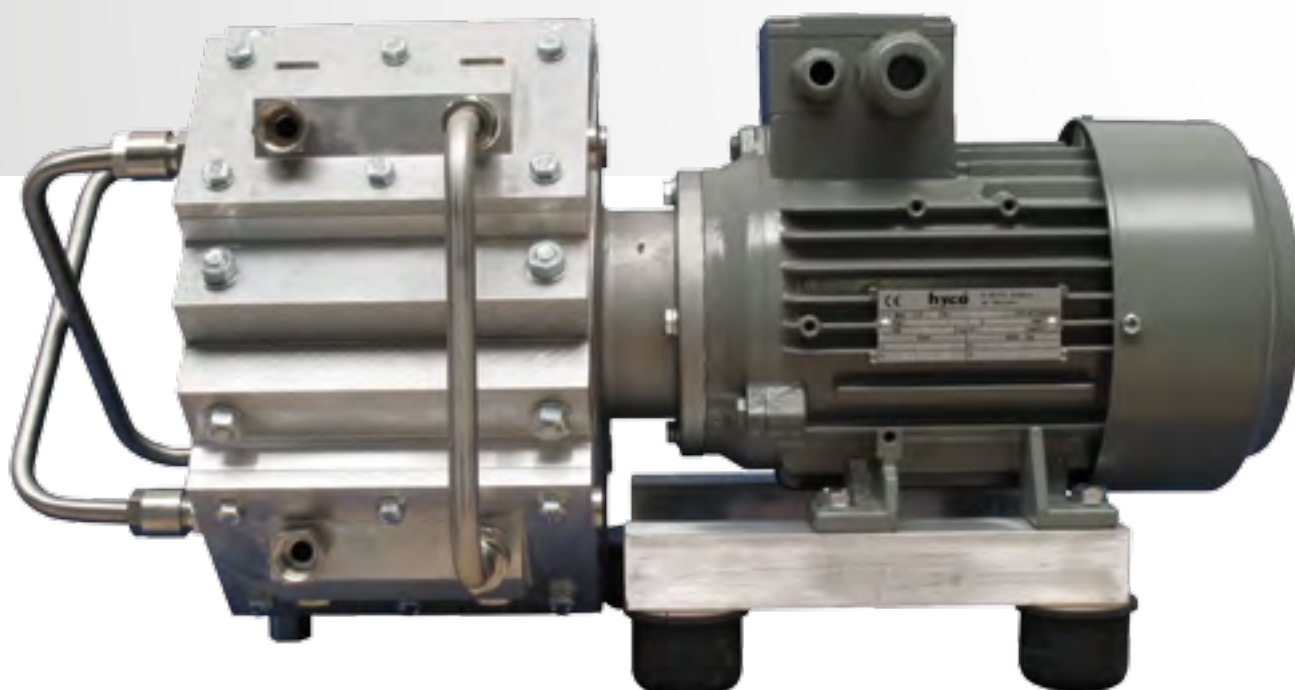

Technical Data - PB 8

Series	ML130.45-ZV	ML130.46-ZV	ML130.48-ZV
Free flow	360 l/min	175 l/min	155 l/min
Final vacuum	75 mbar	9 mbar	2 mbar
Final press. (abs.)	2 bar		
Final pressure with KG-Gears	2 bar		
Pump heads	4		
Hose coupling, suction/pressure	G3/8" / G1/2"		
Motor power / r.p.m.	0,75 kW / 1400 min ⁻¹		
Mains requirement / Frequencies	230/400 V - 50 Hz		
EX motor	on request		
DC motor	not possible		
Noise level	58 dBA to 60 dBA		
Permissible gas admission temp.	+ 5 C° to + 45 C°		
Permissible ambient temp.	+ 5 C° to + 45 C°		
Permissible ambient temp. motor	+ 5 C° to + 45 C°		
Permissible ambient temp. pump head	+ 5 C° to + 45 C°		
Dimensions L x W x H	467 mm x 338 mm x 338 mm		
Weight	26 kg		
Impermeable to gas	1 x 10 ⁻³		

vacuum

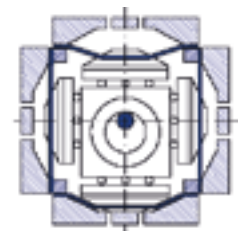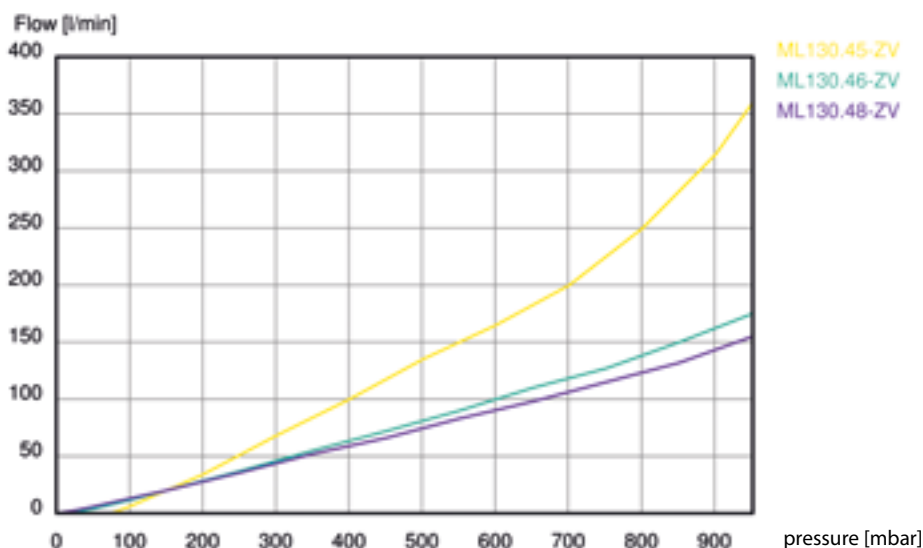

diaphragm

4-cylinder

The oil-free and dry compressing laboratory diaphragm pumps from the PB-20 product line can be used for evacuating, conveying and compressing gases and vapours up to a final vacuum of **1 mbar**. Six different ranges are available within the product line.

The PB-20 product line is equipped with a four-cylinder diaphragm pump with linear drive. The staggering or flexing of the diaphragms is prevented here with precisely-straight upwards and downwards movement between the top dead centre and bottom dead centre. This ensures a long service life for the diaphragm. When compared to con-rod pumps with the same performance, diaphragm pumps are a more compact construction due to the omission of the long and rigid con-rods.

The range is further distinguished by quiet operation with proven long service life and maintenance-free operating time.



The materials used, such as aluminium for the gas-conducting components, stainless steel for the valves and piping and VITON (FKM) for the diaphragms, open up a wide range of application options with non-aggressive gases. Other material combinations on request.



Technical Data - PB 20

Series	LAB-245	LAB-246	LAB-248	LAB-345	LAB-346	LAB-348
Free flow	80 l/min	47 l/min	37 l/min	112 l/min	69,5 l/min	55 l/min
Final vacuum	80 mbar	15 mbar	7 mbar	80 mbar	7 mbar	1 mbar
Final press. (abs.)	3 bar			2 bar		
Final pressure with KG-Gears	3 bar			2 bar		
Final pressure with PR-Gears	higher pressure on request					
Pump heads	4					
Hose coupling, suction/pressure	G 1/4"					
Motor power / r.p.m.	0,37 kW / 1400 min ⁻¹					
Mains requirement / Frequencies	230 V - 50 Hz					
EX motor	not possible					
DC motor	not possible					
Noise level	57 dBA to 59 dBA					
Permissible gas admission temp.	+ 5 C° to + 45 C°					
Permissible ambient temp.	+ 5 C° to + 45 C°					
Permissible ambient temp. motor	+ 5 C° to + 45 C°					
Permissible ambient temp. pump head	+ 5 C° to + 45 C°					
Dimensions L x W x H	361 mm x 243 mm x 248 mm					
Weight	14 kg					
Impermeable to gas	1 x 10 ⁻³					

vacuum

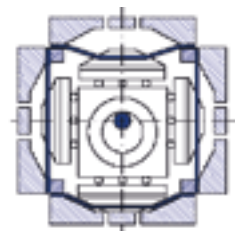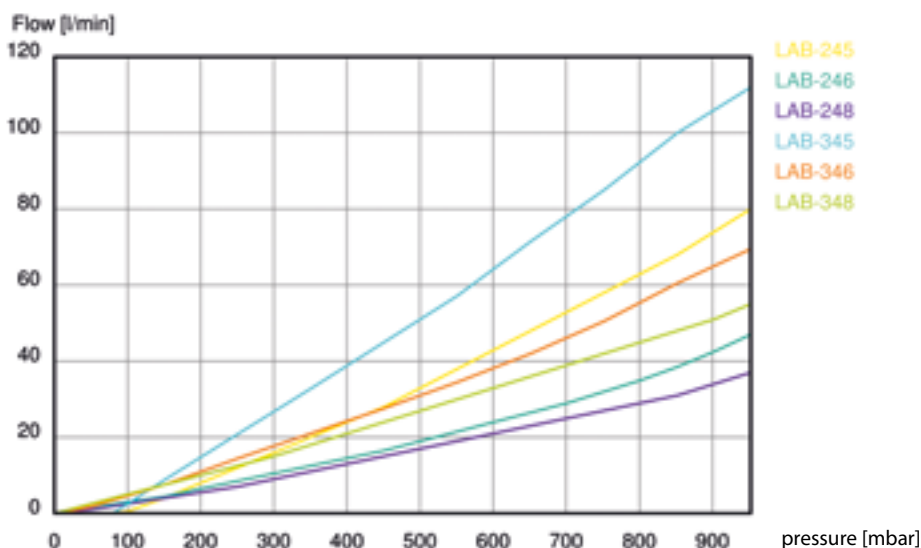

diaphragm

4-cylinder

The oil-free and dry compressing diaphragm pumps from the PB-40 product line can be used for evacuating, conveying and compressing gases and vapours up to a final vacuum of **< 1 mbar**. Four different ranges are available within the product line.

The PB-40 product line is equipped with a four-cylinder diaphragm pump with con-rod drive, which carries out an oscillating, tumbling and rocking, upwards and downwards movement of the diaphragm. The diaphragm is fastened to a rigid con-rod and is subjected to a greater or lesser degree of flexing and stretching, depending on the length of the con-rod. The well-thought-out design of the drive offers the user a compact construction and low spatial requirements.

The range is further distinguished by quiet operation with proven long service life and maintenance-free operating time.


The materials used, such as aluminium for the gas-conducting components, stainless steel for the valves and piping and VITON (FKM) for the diaphragms, open up a wide range of application options with non-aggressive gases. Other material combinations on request.



Technical Data - PB 40

Series	MPRZ75.45-H6-SVE-W14	MPRZ75.46-H6-SVE-W14	MPRZ75.48-H6-SVE-W14	MPRZ75.49-H6-SVE-W14
Free flow	79 l/min	44 l/min	41,5 l/min	24,5 l/min
Final vacuum	100 mbar	11 mbar	2 mbar	1 mbar
Final press. (abs.)	1 bar			
Pump heads	4			
Hose coupling, suction/pressure	G 1/4"			
Motor power / r.p.m.	0,21 kW / 1400 min ⁻¹			
Mains requirement / Frequencies	115 V - 50-60 Hz o. 230 V - 50-60 Hz			
EX motor	not possible			
DC motor	not possible			
Noise level	49 dBA to 53 dBA			
Permissible gas admission temp.	+ 5 C° to + 45 C°			
Permissible ambient temp.	+ 5 C° to + 45 C°			
Permissible ambient temp. motor	+ 5 C° to + 45 C°			
Permissible ambient temp. pump head	+ 5 C° to + 45 C°			
Dimensions L x W x H	303,5 mm x 165 mm x 159,5 mm			
Weight	9,5 kg			
Impermeable to gas	1 x 10 ⁻³			

vacuum

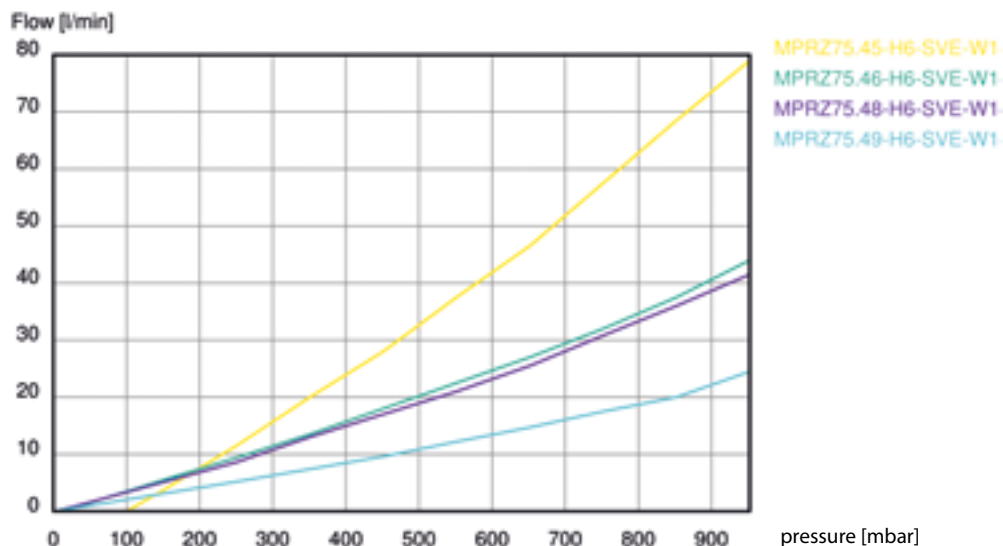

diaphragm


4-cylinder

The oil-free and dry compressing diaphragm pumps from the PB-41 product line can be used for evacuating, conveying and compressing gases and vapours up to a final vacuum of **1 mbar**.

The PB-41 product line is equipped with a four-cylinder diaphragm pump with linear drive. The staggering or flexing of the diaphragms is prevented here with precisely-straight upwards and downwards movement between the top dead centre and bottom dead centre. This ensures a long service life for the diaphragm. When compared to con-rod pumps with the same performance, diaphragm pumps are a more compact construction due to the omission of the long and rigid con-rods.

The range is further distinguished by quiet operation with proven long service life and maintenance-free operating time.



The materials used, such as aluminium for the gas-carrying components, stainless steel for the valves and VITON (FKM) for the diaphragms, open up a wide field of applications for non-aggressive gases. Other material combinations are available on request.

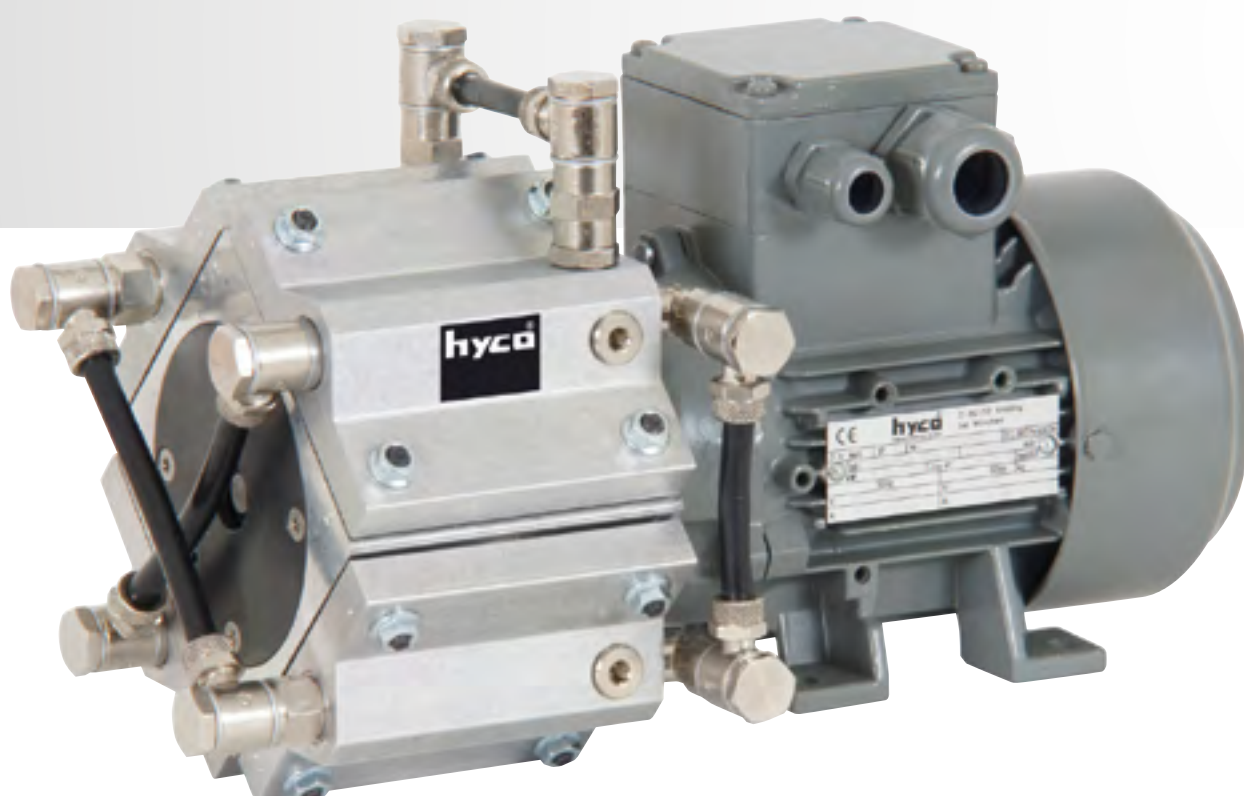

Technical Data - PB 41

Series	ML-75. 45-H6- D14/37	ML-75. 46-H6- D14/37	ML-75. 48-H6- D14/37	ML-86. 45-H8- D14/37	ML-86. 46-H8- D14/37	ML-86. 48- D14/37
Free flow	80 l/min	47 l/min	37 l/min	112 l/min	69,5 l/min	55 l/min
Final vacuum	80 mbar	15 mbar	7 mbar	80 mbar	7 mbar	1 mbar
Final press. (abs.)	2 bar			1 bar		
Final pressure with KG-Gears	2 bar			1 bar		
Pump heads	4					
Hose coupling, suction/pressure	G 1/4"					
Motor power / r.p.m.	0,18 kW / 1400 min ⁻¹					
Mains requirement / Frequencies	230/400 V - 50 Hz					
EX motor	not possible					
DC motor	not possible					
Noise level	57 dBA to 59 dBA					
Permissible gas admission temp.	+ 5 C° to + 45 C°					
Permissible ambient temp.	+ 5 C° to + 45 C°					
Permissible ambient temp. motor	+ 5 C° to + 45 C°					
Permissible ambient temp. pump head	+ 5 C° to + 45 C°					
Dimensions L x W x H	317 mm x 184 mm x 184,5 mm					
Weight	10 kg					
Impermeable to gas	1 x 10 ⁻³					

vacuum

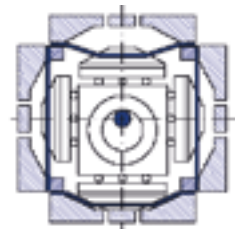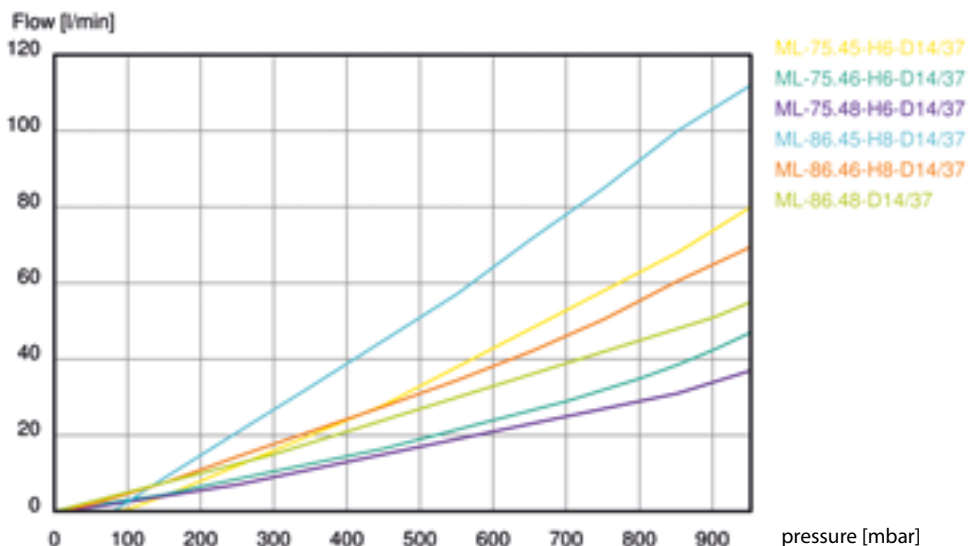

diaphragm


8-cylinder

The oil-free and dry compressing diaphragm pumps from the PB-9 product line can be used for evacuating, conveying and compressing gases and vapours up to a final vacuum of **2 mbar**. Six different ranges with further unique models are available within the product line.

The PB-9 product line is equipped with a eight-cylinder diaphragm pump with line-ar drive. The staggering or flexing of the diaphragms is prevented here with precisely-straight upwards and downwards movement between the top dead centre and bottom dead centre. This ensures a long service life for the diaphragm. When compared to con-rod pumps with the same performance, diaphragm pumps are a more compact construction due to the omission of the long and rigid con-rods.

The range is further distinguished by quiet operation with proven long service life and maintenance-free operating time.



The materials used, such as aluminium for the gas-conducting components, stainless steel for the valves and piping and VITON (FKM) for the diaphragms, open up a wide range of application options with non-aggressive gases. Other material combinations on request.

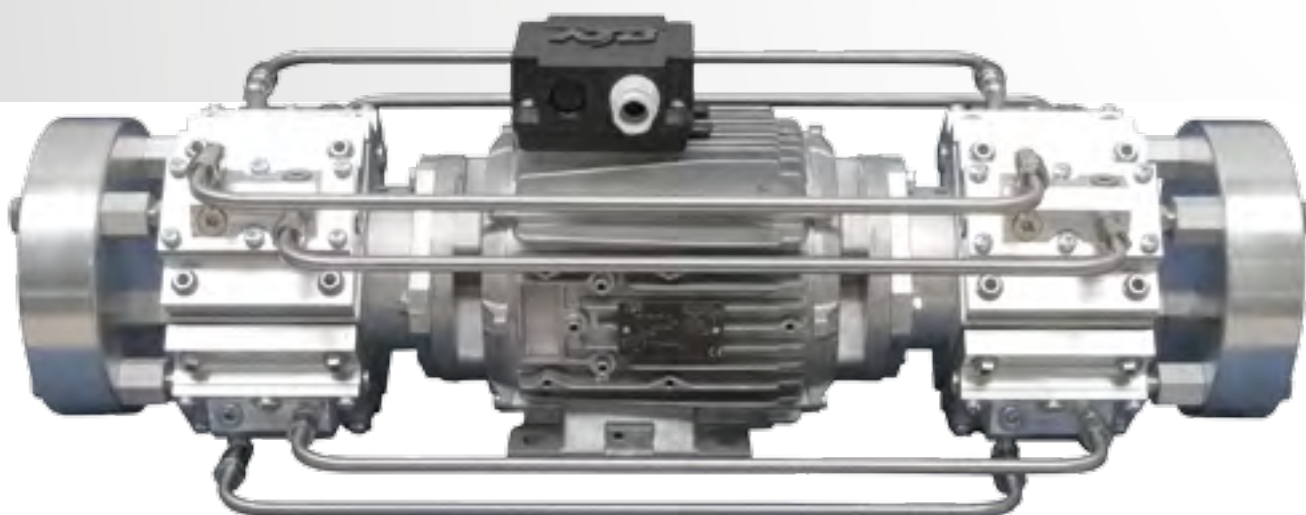

Technical Data - PB 9

Series	ML75. 85-H6-PR-D14	ML75. 86-H6-D14	ML75. 88-H6-D14	ML86. 85-ZV-PR	ML86. 86-H8-ZV-PR	ML86. 88-H8-D14
Free flow	155 l/min	97 l/min	77,5 l/min	220 l/min	138 l/min	114 l/min
Final vacuum	90 mbar	12 mbar	2 mbar	75 mbar	9 mbar	3 mbar
Final press. (abs.)	3 bar			2 bar		
Final pressure with KG-Gears	3 bar			2 bar		
Final pressure with PR-Gears	higher Pressure on request					
Pump heads	8					
Hose coupling, suction/pressure	G3/8" / G1/2"					
Motor power / r.p.m.	0,45 – 0,75 kW / 1400 min ⁻¹					
Mains requirement / Frequencies	230/400 V - 50 Hz					
EX motor	not possible					
DC motor	not possible					
Noise level	58 dBA to 60 dBA					
Permissible gas admission temp.	+ 5 C° to + 45 C°					
Permissible ambient temp.	+ 5 C° to + 45 C°					
Permissible ambient temp. motor	+ 5 C° to + 45 C°					
Permissible ambient temp. pump head	+ 5 C° to + 45 C°					
Dimensions L x W x H	616 mm x 253 mm x 265 mm					
Weight	24,5 kg					
Impermeable to gas	1 x 10 ⁻³					

vacuum

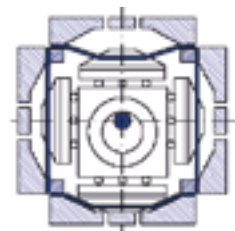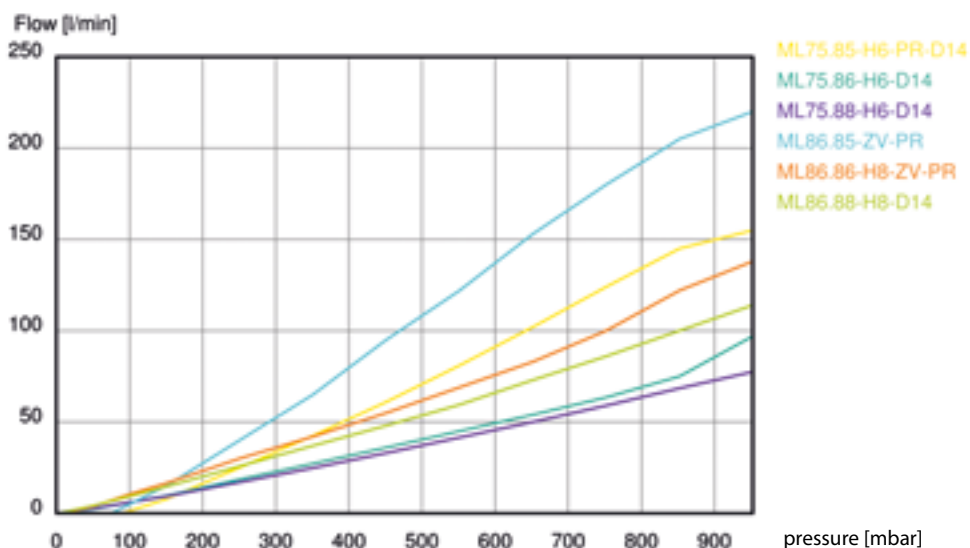

diaphragm

8-cylinder

The oil-free and dry compressing diaphragm pumps from the PB-10 product line can be used for evacuating, conveying and compressing gases and vapours up to a final vacuum of **2 mbar**. Three different ranges are available within the product line.

The PB-10 product line is equipped with a eight-cylinder diaphragm pump with linear drive. The staggering or flexing of the diaphragms is prevented here with precisely-straight upwards and downwards movement between the top dead centre and bottom dead centre. This ensures a long service life for the diaphragm. When compared to con-rod pumps with the same performance, diaphragm pumps are a more compact construction due to the omission of the long and rigid con-rods.

The range is further distinguished by quiet operation with proven long service life and maintenance-free operating time.



The materials used, such as aluminium for the gas-conducting components, stainless steel for the valves and piping and VITON (FKM) for the diaphragms, open up a wide range of application options with non-aggressive gases. Other material combinations on request.




Technical Data - PB 10


Series	ML130.85-ZV	ML130.86-ZV	ML130.88-ZV
Free flow	620 l/min	405 l/min	315 l/min
Final vacuum	75 mbar	18 mbar	2 mbar
Final press. (abs.)	2 bar		
Final pressure with KG-Gears	2 bar		
Pump heads	8		
Hose coupling, suction/pressure	G3/8" / G1/2"		
Motor power / r.p.m.	0,9 – 1,3 kW / 1400 min ⁻¹		
Mains requirement / Frequencies	230/400 V - 50 Hz		
EX motor	not possible		
DC motor	not possible		
Noise level	63 dBA to 65 dBA		
Permissible gas admission temp.	+ 5 C° to + 45 C°		
Permissible ambient temp.	+ 5 C° to + 45 C°		
Permissible ambient temp. motor	+ 5 C° to + 45 C°		
Permissible ambient temp. pump head	+ 5 C° to + 45 C°		
Dimensions L x W x H	743 mm x 338 mm x 338 mm		
Weight	30 kg		
Impermeable to gas	1 x 10 ⁻³		

vacuum

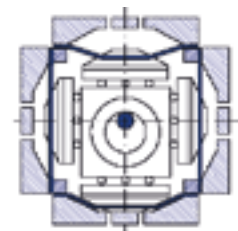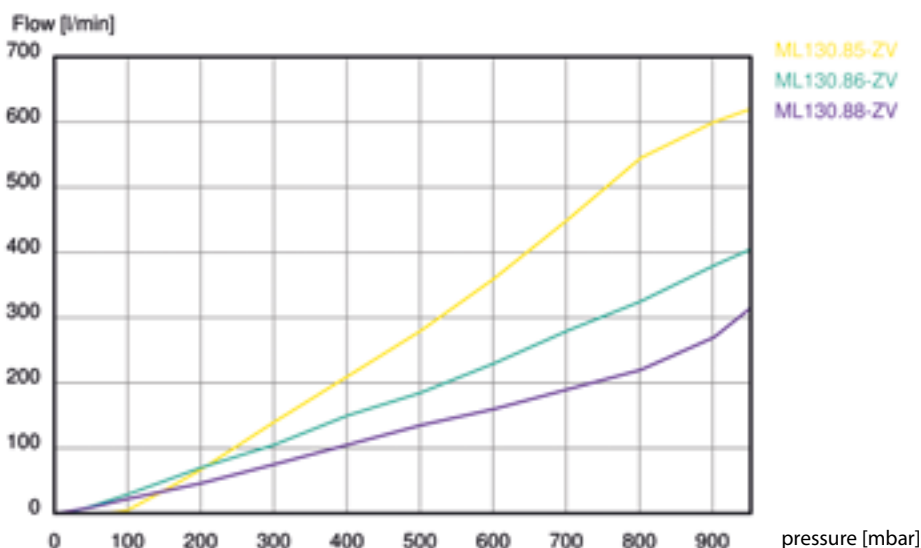

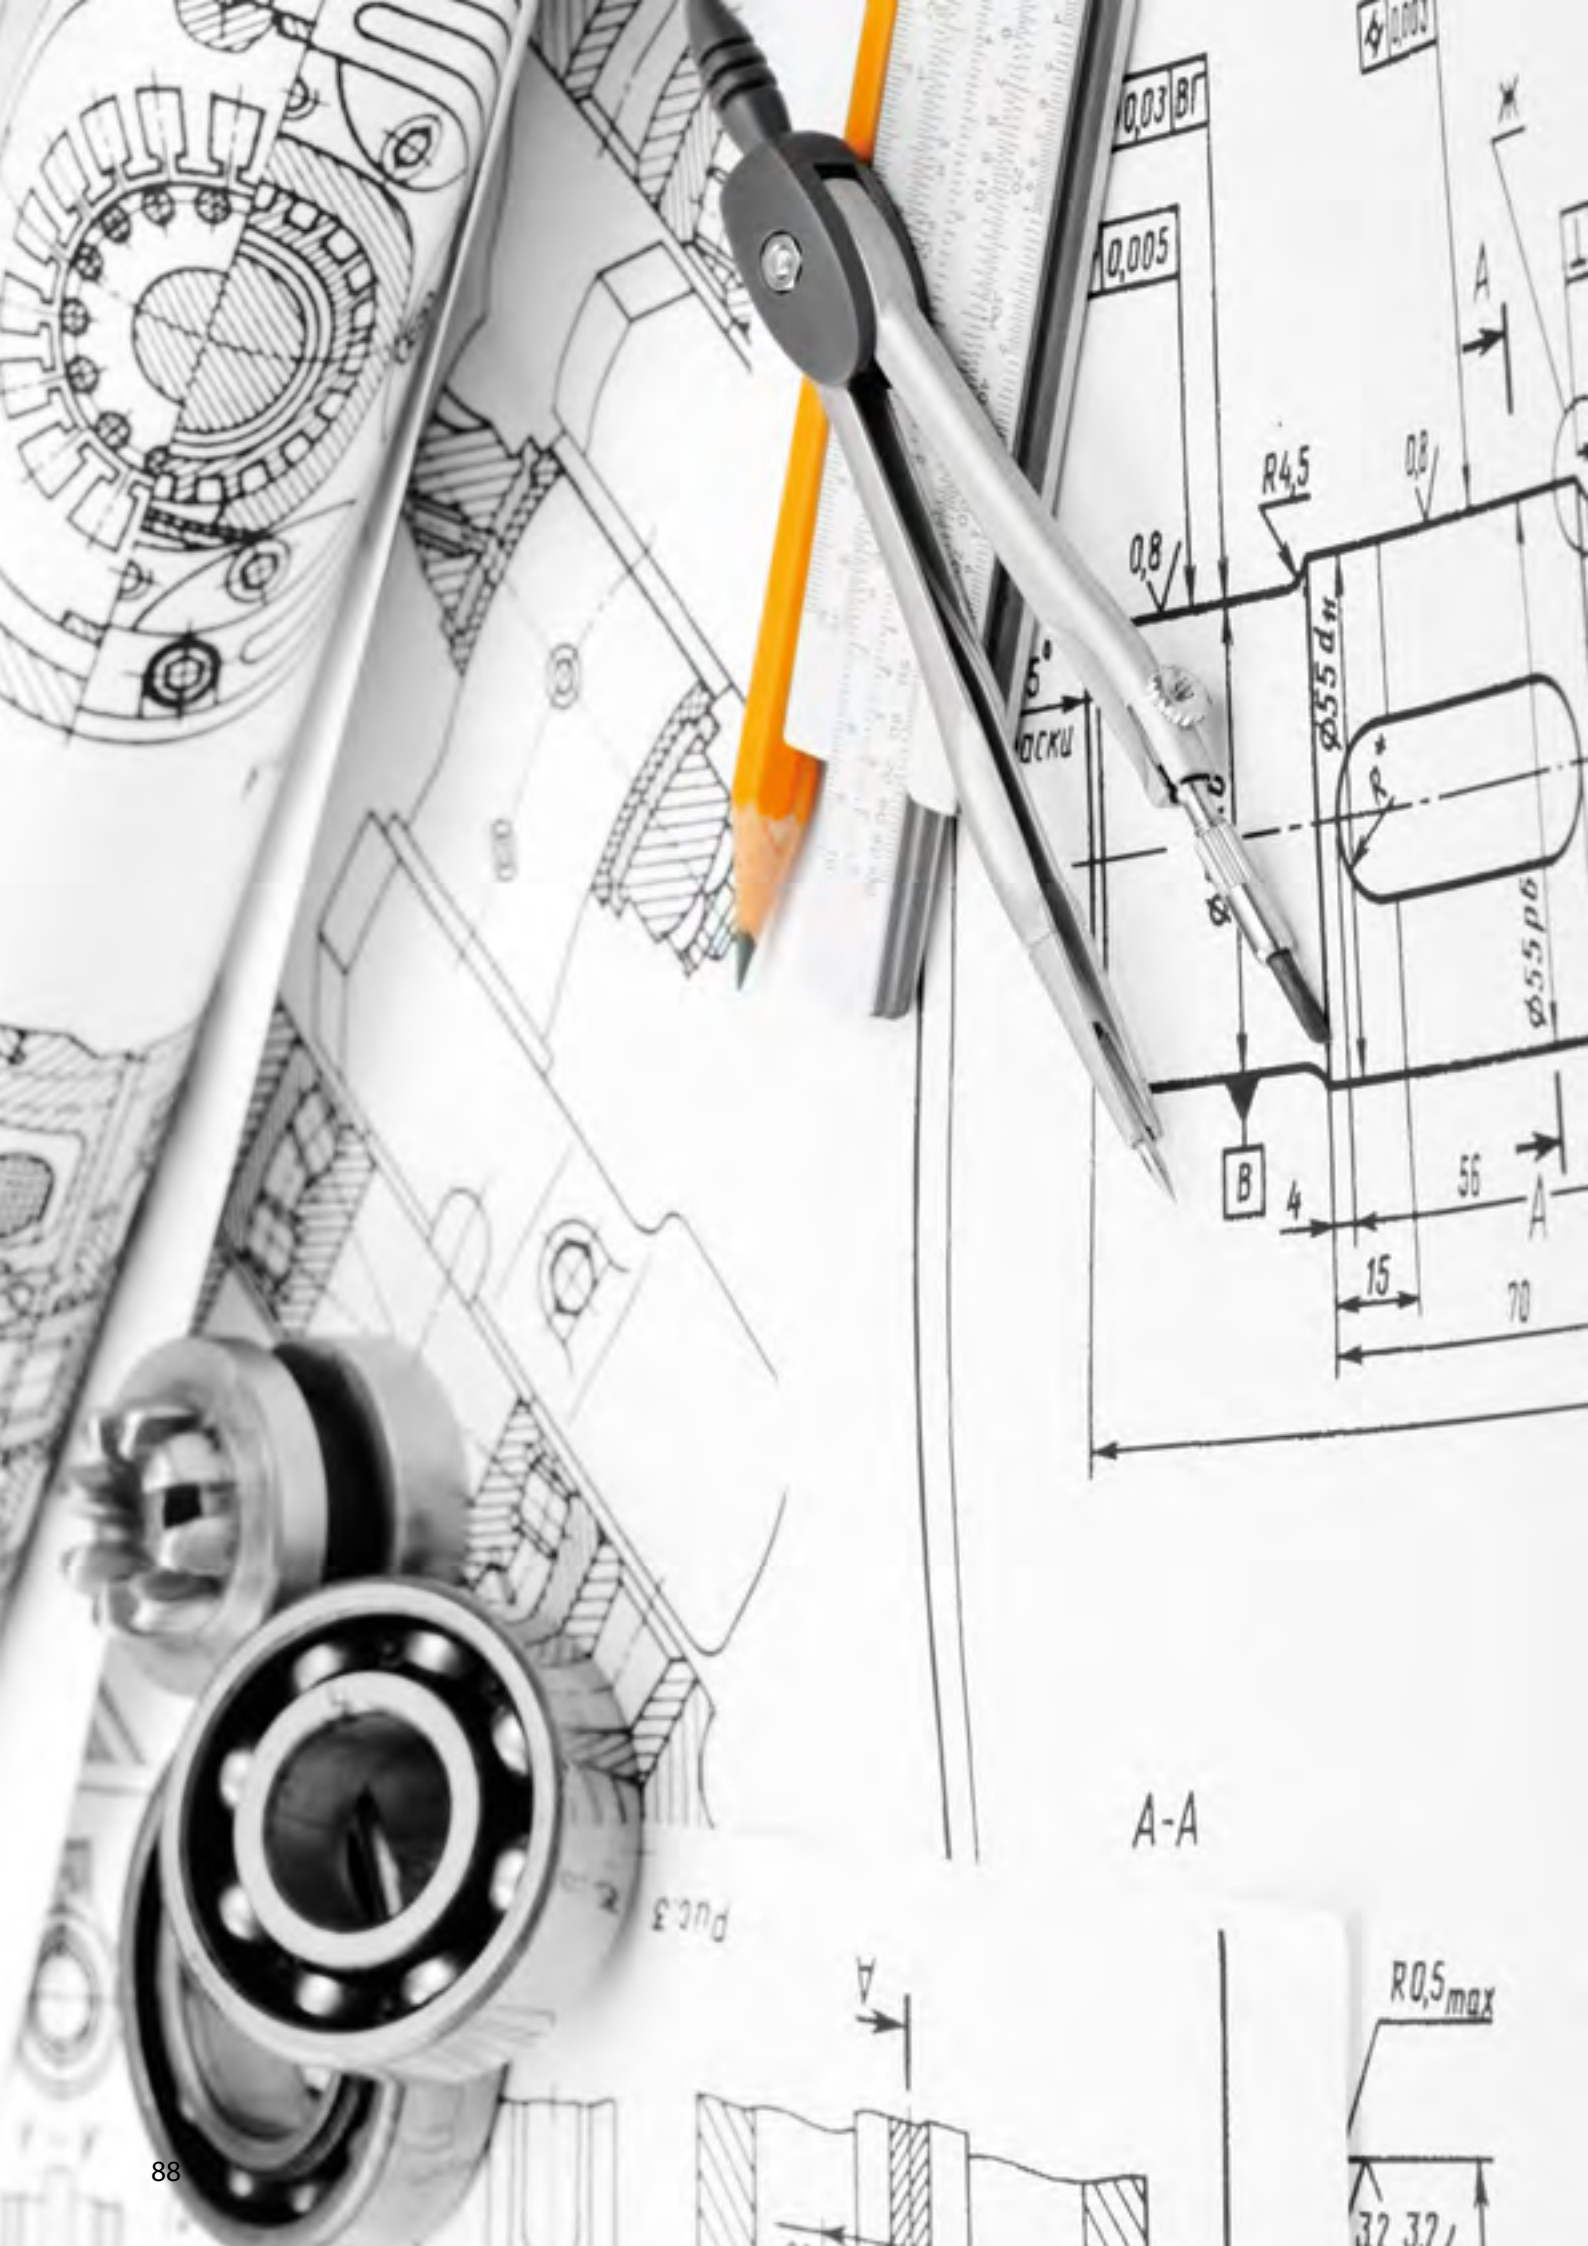


Unsere hyco® Membran- und Kolbenpumpen werden nach verschiedenen Technologien gebaut, die wir hier vorstellen. Eine Animation und weitere Informationen für jede Technologie finden Sie auf hyco.de.

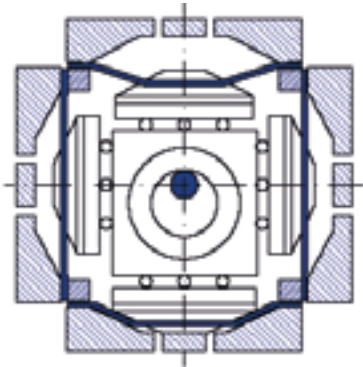


Technology series ML

hyco-diaphragm pumps with linear driving mechanism - No wobbling and stretching of the diaphragms and therefore no high stress on the diaphragms. The diaphragms are positioned directly over the motor shaft. Thus hyco ML-pumps are more compact in comparison to plunger pumps with comparable output.

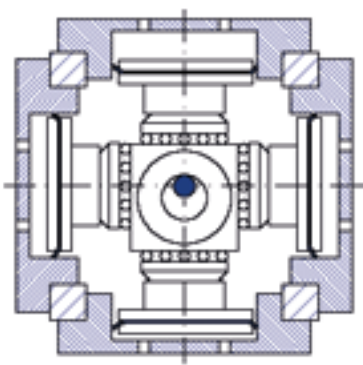


Technology series KL

The straight guidance of the piston in the cylinder, between top dead centre and bottom dead centre, ensures that the piston sealing rings are evenly loaded all around. In contrast to tilting movements, this achieves a long service life for the piston sealing rings.

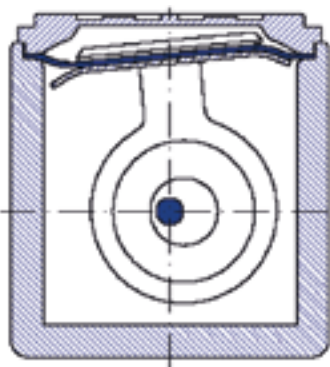

Technology series MP

hyco-diaphragm pumps with connecting-rod driving mechanism - In the conventional systems of a diaphragm stroke movement via eccentric with connecting-rod the diaphragm is subject to a wobbling movement and therefore the diaphragm suffers through wobbling and stretching. The more shorten the connecting-rod is built, thus the more compact these pumps are constructed the much greater is the danger of wear and tear and the risk of crack of the diaphragm.

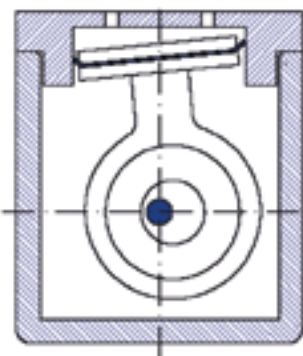

Technology series KP

1-cylinder piston pump with con-rod drive. The piston, rigidly fixed to the con-rod, carries out a tilting motion in the cylinder when moving up and down. The piston rings are therefore more heavily stressed than with a linear drive. The length of the con-rod from the eccentric shaft to the piston is however designed to impart as small a tilting motion as possible to the piston.

nicht zertifiziert

Arbeitsmembran mit antistatischer Wirkung

Schöpfraum

Zwischenraum
Doppelmembransystem mit Membranüberwachung.
Spülmöglichkeit des Zwischenraums mit Stickstoffgas.

Abdichtmembran mit antistatischer Wirkung

Spülgaseingang

Mechanischer Exschutz durch Spülmöglichkeit des gesamten Pumpengetriebes einschließlich der Kupplung zum Antriebsmotor mit Stickstoffgas zur Vermeidung mechanischer Zündquellen.

Motor

Spülgasausgang

Um eine Erhitzung des Getriebes durch Wärmeübertragung über diese Bauteile zu vermeiden, werden diese aus schlecht wärmeleitendem VA hergestellt. Falls erforderlich auch alle Gas führenden Bauteile aus VA oder aus ALU mit Beschichtung: Chemisch Nickel - C - oder Hartcoat - E -

Merging the flushing gas circuit (red) with the transmission chamber (yellow) should be avoided. In the event of a leak in the working membrane, the gas from the suction chamber (green) mixes with the flushing gas and enters the transmission chamber (yellow). Disadvantage: Possible transmission damage if aggressive gases are involved.




Connection options hyco® pumps

With all multi-cylinder pumps, each working cylinder can be individually used for suction or pressure operation.

The flow performance and the final vacuum can be adapted to suit the requirements through pipework on the suction side and pressure side of the working cylinder, connected in parallel or in series with VA piping, in accordance with the possibilities shown here.

All of the performance data resulting from the various cylinder interconnection options are listed in the PB product datasheets

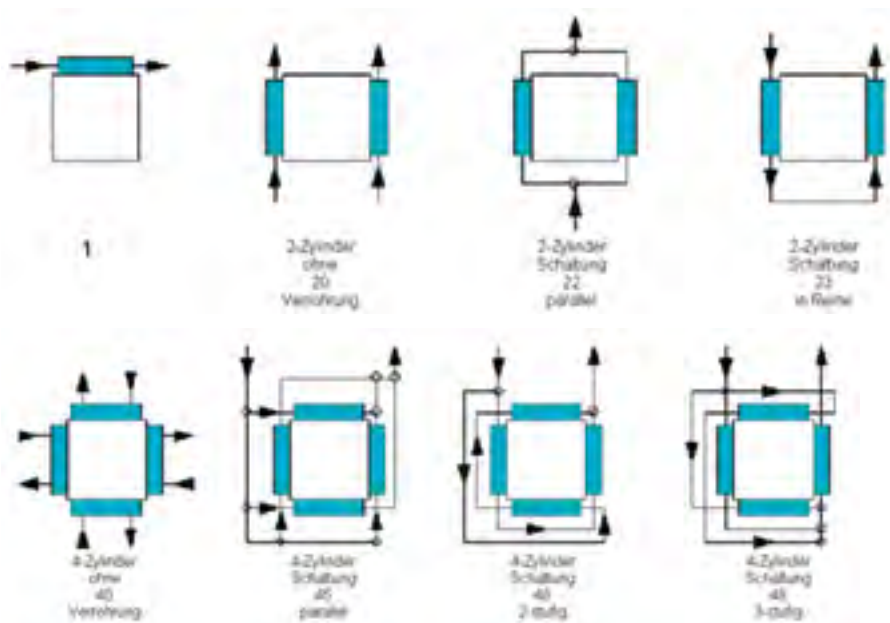

1- and 2- Cylinder diaphragm pumps

4-Cylinder diaphragm pumps



With hyco® standard pumps, cylinder heads, valve plates and diaphragm discs are made from aluminium.

The other gas-conducting components:

Diaphragms made from VITON

Valves made from VA (additional VITON or EPDM)

Cylinder piping made from VA

A cost-effective, high level of chemical resistance can be achieved through coating the gas-conducting aluminium components.

For resistance to alkalis:

Aluminium components chemically nickel-plated

Coating thickness 15 microns

Designation: C-

You can find a list with resistance to alkalis of hyco® pumps at hyco.de - Technology overview - upgrade.

For resistance to acids:

Aluminium components hard-coated and re-pressed

Designation: E-

You can find a list with resistance to acids of hyco® pumps at hyco.de - Technology overview - upgrade.

Pipe screw connections with C- and E- made from VA (Swagelok)

Highest level of chemical resistance:

Against alkalis and acids

All gas-conducting components made from PTFE

Designation: T-

Clarification of chemically applied nickel coating (designation C) - Original chem nickel:

hyco offers only the chemical nickel coating with a coating thickness of ca. 15 microns. This is absolutely non-porous and is applied with the same coating thickness throughout. In contrast to galvanic nickel coatings, there are no weak points or points-of-attack on corners, holes or threads.

Conversion tables

Conversion table pumping speed

m ³ /h	l/min	l/sek	cfm
1	16,67	0,278	0,589
0,5	8,34	0,139	0,295
1,5	8,34	0,139	0,295
1,5	25,01	0,417	0,884
2	33,34	0,556	1,18
3	50,01	0,834	1,77
4	66,68	1,11	2,36
5	83,35	1,39	2,95
6	100,0	1,67	3,53
7	116,7	1,95	4,12
8	133,4	2,22	4,71
9	150,0	2,50	5,30
10	166,7	2,78	5,89
15	250,1	4,17	8,84
20	333,4	5,56	11,8
30	500,1	8,34	17,7
40	666,8	11,1	23,6

Conversion table final vacuum

mbar (hPa)	psi	Pa N/m ³	torr (mm Hg)
1	1,45 x 10⁻²	100	0,750
100	1,45	10000	75,0
70	1,02	7000	52,5
50	0,725	5000	37,5
20	0,290	2000	15,0
15	0,218	1500	11,3
10	0,145	1000	7,50
7	0,102	700	5,25
5	7,25 x 10 ⁻²	500	3,75
2	2,9 x 10 ⁻²	200	1,50
1,5	2,18 x 10 ⁻²	150	1,13
1	1,45 x 10 ⁻²	100	0,75
0,5	7,25 x 10 ⁻³	50	0,38
0,1	1,45 x 10 ⁻³	10	7,5 x 10 ⁻²
10 ⁻²	1,45 x 10 ⁻⁴	1	7,5 x 10 ⁻³
10 ⁻³	1,45 x 10 ⁻⁵	10 ⁻¹	7,5 x 10 ⁻⁴
10 ⁻⁶	1,45 x 10 ⁻⁸	10 ⁻⁴	7,5 x 10 ⁻⁷

DATA SHEET		Date:	hyco®	
I am / we are interested in hyco-pumps. Please transmit informations and a quotation for the following hyco pump to me / us:				
Brochure sheet nr.: PB Type:		My / our address:		
Quotation: to Date for pieces / p.a. call order pieces		Mr / Mrs: Company: Department: Address: Postcode/Place: Tel.: Fax: eMail:		
Date of Serial introduction Remark:				
Demands / Application:				
Performance:				
Free flow:	NI/min	start of run against:	pressure or vacuum	
Final vacuum.:	mbar abs.	Final pressure:	bar Ü. or psi.	
Working point:	NI/min at	mbar abs. (air inlet) and	bar Ü. or psi. (air outlet)	
Medium:	temperature:	°C	condensate: yes <input type="checkbox"/>	no <input type="checkbox"/>
Motor:				
Three-phase motor:	<input type="checkbox"/> Connected	Voltage:	V	Frequency: Hz power: kW IP:
Alternating-current motor:	<input type="checkbox"/> Connected	Voltage:	V	Frequency: Hz power: kW IP:
DC motor:	<input type="checkbox"/> Connected	Voltage:	V	power: W IP:
Current consumption (Free flow):	A	Current consumption (max.):	A	
Remark:				
Application:				
1 shift work(2000h/p.a.): <input type="checkbox"/> 2 shift work(4000h/p.a.): <input type="checkbox"/> 3 shift work(6000h/p.a.): <input type="checkbox"/> Continuance(8760h/p.a.): <input type="checkbox"/>				
Continuous operation:	<input type="checkbox"/>	Cycle: <input type="checkbox"/>	on: min / off: min	
Dimensions:	mm		Weight:	kg
Noise level:	dB(A)		Tightness:	mbar x l/s at Initialpressure: bar or psi
Ambient:				
Temperature:	°C	humidity of the air:	%	Atmospheric pressure: hPa
Portable pump:	<input type="checkbox"/>	apparatus for to build:	<input type="checkbox"/>	Dimensions (LxBxH): mm

